

2001 FEE 21 P 2 11

4220 - 6F-100

10 E. Doty Street, Suite 511
Madison, WI 53703
Madison, WI 53703
Fax 608) 280-7359

MASTER

MASTER

February 13, 2001

Ms. Lynda L. Dorr Secretary of the Commission Public Service Commission of Wisconsin 610 North Whitney Way P.O. Box 7854 Madison, WI 53703-7854

Re: Preventive Maintenance Plan Filing Requirement Per

Wis. Admin. § PSC 113.0607(2)(b)5

4220-GF-100

*/SCONSIN

Dear Ms. Dorr:

On August 1, 2000, Wis. Admin Code ch. PSC113 – Service Rules for Electric Utilities took effect and required utilities to file preventive maintenance plans within 180 days of the effective date. On January 17, 2001 Xcel Energy filed a request to the Commission for a 30 day extension, to March 2, 2001, to file a preventive maintenance plan pursuant to Wis. Admin. Code § PSC 113.0607(2)(b)5. At the January 31, 2001 Open Meeting the Commission granted Xcel Energy's request for a 30 day extension and issued notice on February 8, 2001.

Pursuant to the requested extension, attached is Xcel Energy's Preventive Maintenance Plan in compliance with § PSC 113.0607(2)(b)5. Please contact me at 608 280-7301 or brian.r.zelenak@xcelenergy.com if you have any questions.

Respectfully submitted,

Brian R. Zelenak

Manager, Regulatory Policy

But h Jelenak

enc.

c: J. Loock Internal

mrc Elect

Preventative Maintenance Plan for Xcel Energy Inc.

Compliance Filing for Wis. Admin. Code ch. PSC 113.0607

Table of Contents

Cla	ause	<u>Tab</u>
1.	Overview 1.1 Distribution Substation Maintenance Activities 1.2 Transmission Substation and Line Maintenance Activities 1.3 Substation Corrective Maintenance Priority Scheme	Tab 1 1 2 3
2.	Infrared Surveys	Tab 2
3.	Substation In-Service Inspection	Tab 3
4.	Substation Battery Maintenance	Tab 4
5.	ABB HPL Circuit Breaker Timing	Tab 5
6.	Oil Circuit Breaker Detailed Inspection	Tab 6
7.	Voltage Regulator Detailed Inspections	Tab 7
8.	LTC Inspection	Tab 8
9.	Gas Circuit Breaker Detailed Inspection	Tab 9
10	. Substation Relay Inspection	Tab 10
11	. Doble Protest Testing	Tab 11
12	2. Electrical Functional Testing of Solid State Distance Relaying System including Power Swing Block	Tab 12
13	3. Transformer Detailed Inspections	Tab 13
14	1. Transformer Electrical Testing	Tab 14
15	5. Transformer Oil Testing	Tab 15
16	6. Transformer Condition Assessment Criteria	Tab 16
17	7. Wheaton Generating Plant Maintenance Plan	Tab 17
19	R. French Island Generating Plant Unit 3 & 4 Maintenance Plan	Tab 18

1. Overview

1.1 Distribution Substation and Line Maintenance Activities

The 2001 Preventative maintenance plan for Xcel Energy is contained within this document. This document will clearly explain the appropriate inspections and maintenance cycles, inspection methods, criteria for condition rating, and the corrective action schedule. Below are a series of tables that will outline the present practices for substation preventative maintenance for both the transmission and distribution substations. Also included are the transmission line and distribution line maintenance practices.

The Inspection Schedule for all distribution substations, related equipment, and distribution lines can be found in Table 1 and Table 2. These tables define the maintenance activities, numbers of tasks, and the present work intervals.

Distribution Substation Maintenance

Distribution Substation Maintenance					
of Tasks	Activities	Intervals			
68-85	Battery Condition Assessment	completed in the spring, yearly			
68-85	Battery Inspection	completed in the fall, yearly			
24-31	Transformer Condition Assessment (1/6 of total of 182 transformers in WI)	once every 6 years			
124-155	Transformer oil testing - oil testing for all transformers not receiving the condition assessment	completed yearly			
4	LTC Inspections (1/6 of total LTCs in WI)	once every 6 years			
45-56	Breaker Condition Assessments (1/6 of total of 420 in WI)	once every 6 years			
150 -187	Regulator Condition Assessments (1/6 of total of 560 in WI)	once every 3 years			
144 -180	Substation Condition Assessments	completed yearly			
144 -180	Substation Infrared Condition Assessments	completed yearly			

Table 1

Distribution Line Maintenance

# of Tasks	Activities	Intervals
2	Auto-transfer switchgear maintenance	completed yearly
42-58	Field regulator condition assessment	once every 3 years
37-46	3 phase field recloser maintenance	once every 9 years
10	1 phase field reclosers maintenance	1/9 of total reclosers with greater than 100 customers
2	Infrared inspection of normal overload feeders	yearly for feeders with normal overloads
1	Infrared inspection of 1 st contingency feeder with 150% overload	yearly for feeders at risk

Table 2

1.2 Transmission Substation and Line Maintenance Activities

In Tables 3 and 4, the inspection schedules for transmission substations, related equipment, and transmission lines. The table provides information on numbers of tasks, description of activities for each equipment type, and the intervals for the inspections.

Inspection Schedule for transmission substation equipment

# of Tasks	<u>Transmission Substation Activities</u> <u>for WI for 2001</u>	Intervals for Inspections
77-96	Battery - Condition assessment testing in Spring and Inspection in Fall - 2X per yr.	twice a year – Spring is condition assessment and fall is general condition
47-59	Breaker condition assessments (1/6 from a total of 540 in WI)	1\6 or once every six years
44-55	Infrared condition assessments of 55 substations	Annually for all substations
3	LTC condition assessments (48 total number of transformers on a 6 yr. cycle)	Six year cycle
1	LTC Upgrade (30 LTC transformers)	As needed by the manufacturer
16	Relay and Carrier system testing for 16 (or 32 ends and 1/2 of bulk system) transmission lines	One half of the bulk transmission system or every other year
44-55	Substation condition assessment	Annually for all substations
15	Transformer Electric Test (6 year cycle - total 89)	1\6 annually or once every six years
200-260	Transformer oil testing for 260 Tests	Annually
15	Transformer Relay Test (6 year cycle - total 89)	1\6 annually or once every six years

Table 3

PSC 113.0607

Inspection Schedule for transmission lines					
Estimated # of Activities	Dlan	Intervals for Inspections			
	Patrols of Transmission lines (four patrols annually)				
1,723 pole miles	1. Air Patrol helicopter inspections (pole miles @ 85% of total)	Annually			
1,723 pole miles 3,447 pole miles	 Ground inspections (pole miles @ 85% of total) Patrols (3 and 4) of system by either helicopter patrol, fixed wing, and or ground patrol 	Annually Annually			

Table 4

Table 5 lists the miles of transmission lines by voltage class. These numbers determine the numbers of line miles to fly, inspect wood poles, and or foot patrol described in table 4.

Transmission Line Miles in WI

NSP WI		
Voltage (kV)	Number of line miles	
345	164	
161	276	
115	448	
88	73	
69	1067	
TOTAL	2028	

Table 5

1.3 Substation Corrective Maintenance Priority Scheme

In addition to the Preventative Maintenance, Construction Operating and Maintenance (COM North) receives requests for service from the control center, field crews, engineering, operators, and others. These requests are logged, discussed, and prioritized on a daily basis. Table 6 provides a methodology to prioritize the daily request for information for COM North and provides a mechanism to track the status of a particular request for service. The corrective maintenance requests also follow the guidelines in table 6. Consideration is given to ability to outage a piece of equipment for repair, lead time for parts, resource availability, and critical nature of the repair.

Construction Operating and Maintenance (COM North) Priority Numbering Examples and Intervals						
Priority	Priority Numbering Examples and In <u>Descriptions</u>	Intervals				
<u>Number</u>	GOVEN de request for service	Daily meeting to discuss the				
0	COM North received a request for service	priority ranking				
1	Critical Items (Emergency calls from the control center requiring immediate attention – failed equipment, transformer lock outs, breaker lock outs, block trip) – (Loss of AC, RTU failure, air pressure alarms, battery grounds, no breaker controls, continuous gas leak or breaker in block trip) - (Air leaks or compressor failure, MOD problems, oil pump runs continuously, battery grounds above 70 volts)	0 to 30 Days				
1.1	Work in 1 waiting for parts					
1.5	Normal routine watch list (examples are gas – in- oil test for transformers, concerned leaks, low oil alarms or leaks	1-12 months				
1.9	Battery work as prioritized by the capital model (0-9)	Battery replacement within the year				
2	Work to be scheduled (Disconnect closes partially, air leak, breaker won't close via SCADA, low Nitrogen.)	3-6 months				
2.1	work in 2 waiting for parts					
3	Work to be scheduled when at the substation (verify the CT or pt ratios, counter does not work, latch on door needs replacing – cabinet door stills closes)	6-9 months				
3.1	Work in 3 waiting for parts	10.10				
9	Work to monitor (i.e. verify all metering in substation, check counter operations, building general condition – truck hit door and dented – no action needed)	9-18 months				

Table 6

Documents containing the methods of inspection, instructions for the inspectors, and the condition rating criteria for each piece of equipment, can be found within the following Appendix. Field inspectors or crew records are forwarded to the manager of Construction Operations & Maintenance in Wisconsin located in Eau Claire. The manager will review and prioritize the corrective work in accordance with Table 6. Records are then filed in a central filling system located at the Eau Claire offices.

Infrared Surveys

1. Purpose

Conduct infrared surveys on the Electric Delivery System to find hot spot conditions and correct the problem before it causes an outage.

2. Scope

Infrared survey sites include Distribution and Transmission Substations (all equipment, buss, and connections) and the Distribution System (Overhead – connections and equipment, Underground – padmount switchgear, capacitors, and transformers.

Surveys should be completed during off-peak, (spring or fall) so that repairs can be made prior to peak. (It is usually difficult to obtain outages to equipment for repairs during peak times.)

Infrared Survey

Appendix A: Substations

1. Task

Conduct a yearly preventative maintenance infrared survey of all substations. All buss, equipment, and connections are to be surveyed with an Electronic Imaging, Infrared Camera

2. Condition

Conduct preventative maintenance infrared surveys of substations to identify potential problems due to hot spots.

Maintenance and construction departments will work to correct potential problems before equipment is damaged and/or outages are caused.

3. Guideline

Guidelines to repair hotspots within a range of temperatures above ambient are found in Table 1. Ambient is defined as the temperature of like or adjacent equipment.

Temp above Ambient (degrees)	Action Required
0 – 50 F (0 – 28 C)	Re-check spot in 6 months*
51 – 120 F (29 – 67 C)	Repair within 1 month
121 F + (68 C +)	Repair or take out of service within one
	business day

Table 1

* Substation Transformers with hot spots of 20 degrees F or greater above ambient should be fixed As Soon As Possible (one week or less).

Infrared Survey

Appendix B: Distribution Feeders

1. Task

Conduct Preventative Maintenance infrared survey of Distribution feeders.

All equipment and connections are to be surveyed with an Electronic Imaging, Infrared Camera

2. Condition

Conduct preventative maintenance infrared surveys of distribution feeders that are identified with normal overload conditions or as worst performing feeders, in order to identify potential problems due to hot spots.

Mainline feeders – Overhead and underground, including all equipment (such as switchgear, capbanks, transformers, reclosers, etc.) and connections.

Maintenance and construction departments will work to correct potential problems before equipment is damaged and/or outages are caused.

3. Guideline

Guidelines to repair hotspots within a range of temperatures above ambient are found in Table 1. Ambient is defined as the temperature of like or adjacent equipment.

Temp above Ambient (degrees)	Action Required
0 – 50 F (0 – 28 C)	Re-check spot within one year
51 – 120 F (29 – 67 C)	Repair within 3 months
121 F + (68 C +)	Repair or take out of service within one
1211 (00 6 1)	business day

Table 1

Substation In-Service Inspection

1. Purpose

This procedure is for the routine In-Service inspection of XCEL ENERGY substations.

2. <u>Definitions</u>

- 2.1. **Inspection** includes the following:
 - 2.1.1. Cleaning devices.
 - 2.1.2. Testing as required.
 - 2.1.3. Repairing or Correcting sub-standard conditions where possible.
 - 2.1.4. Noting "as-left" conditions that require further attention.
 - 2.1.5. Recording "as found" and "as left" conditions.

2.2. Maintenance Provider Technician

That individual, trained and qualified in accordance with appropriate testing instructions and procedures, who has been designated by the Supervisor as having the responsibility for the correct performance of the work required by this procedure.

3. Equipment Needed

- 3.1. A properly stocked Maintenance truck
- 3.2. Inspection Forms

4. References

- 4.1. Manufacturer's Instruction Book for each piece of equipment
- 4.2. Substation One-line diagram

5. Procedure

5.1. Precautions

5.1.1. Maintenance provider personnel shall take necessary precautions to prevent accidental contact with high voltage equipment as per the XCEL ENERGY Safety Manual.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	PPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED/ ATJ	APPROVED			
PROTECTION	DATE 1/4/01		5	SHEET 1 of 8	APP - 2.01.01

5.3.

5.2. <u>Instructions</u>

<u>NOTE</u>: Use pen in completing all forms. Results of the following steps shall be documented on Inspection Report Pages. Each step of these instructions shall be initialed prior to starting the next step.

5.2.1. Maintenance Truck - Before proceeding to an inspection site, check the truck for sufficient supplies per the In-Service Inspection Parts List for Trucks 5.2.2. Contact System Operator or Regional Dispatcher prior to inspection and inform them that you are in the substation performing maintenance. 5.2.3. Electrical Apparatus - Check each and every piece of apparatus in the yard and complete the appropriate Inspection List for each. Document As-Found and As-Left conditions on the Inspection Report. 5.2.4. Check, Correct and/or document any irregularities found in the yard or control house. Close-out 5.3.1. Complete all Inspection Forms. Record all required work done and "As Found" information including conditions that may have prevented proper operation of the equipment.

SUBSTATION IN-SERVICE INSPECTION

5.3.2. Insure all data forms are completed and attached.

5.3.3. Reviewed by Engineer.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED/ ATJ	APPROVED			
PROTECTION	DATE 1/4/01		5	SHEET 2 of 8	APP - 2.01.01

MISCELLANEOUS EQUIPMENT INSPECTION LIST (attach as many sheets as necessary)

	Substation				
Ele	Electrical Apparatus - attach detailed inspection sheets as needed.				
1)	Inform – Systems Operation, Trouble Foreman or Local Dispatch, that you are in the substation performing maintenance.				
1)	Visually inspect general condition of equipment: Needs				
2)	a) Cap banks (fuses, leaks etc.) b) MOD's (heaters, fuses, Thermostats, etc.) c) Insulators (chipped, broken or flashed) d) C.T.'s & P.T.'s (oil leaks, oil level) e) Disconnects (no arching, fully closed, etc) Visually inspect other Substation conditions: a) insulators, disconnects, station grounds, etc b) Sample oil if due. Note any conditions requiring an outage to repair.				
Ot	her Remarks or Comments				
_					
C	REW MEMBERS DATE				

Xcel Energy - North	DRAWN SIS FILMED REV EM&P		EM&P PHYSICAL A	P PHYSICAL APPARATUS PROCEDURES	
	CHECKED/ ATJ	APPROVED			
Protection	DATE 1/4/01		5	SHEET 3 of 8	APP - 2.01.01

TRANSFORMERS AND LTC INSPECTION LIST (attach as many sheets as necessary)

	Substation Transformer # (For more detailed instructions see APP – 6.017.05)
1)	Inform – Systems Operation, Trouble Foreman or Local Dispatch, that you are in the substation performing maintenance.
	Visually inspect general condition of equipment: Needs ConditionAttn. Remarks a) Bushings (oil levels, broken etc.) b) oil levels (main tank and LTC) c) Control cabinet (fuses, heaters, thermostats etc.) d) Animal guards e) Grounding connections f) Is the TR schematic in the control cabinet? g) Oil leaks h) operate fans and pumps (lubricate) i) Change Nitrogen bottle if under 600 psi j) Check for leaks (using soap suds) k) Sample oil if due l) Note any conditions requiring an outage to repair
	Note any conditions requiring an outage to repair. Remove defective fans for repair. omments:

Complete inspection sheets and return to office.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED/ ATJ	APPROVED			
PROTECTION Protection	DATE 1/4/01		5	SHEET 4 of 8	APP - 2.01.01

VOLTAGE REGULATOR INSPECTION LIST (attach as many sheets as necessary)

	Substation Regulator #									
1)	Inform – Systems Operation, Trouble Foreman or Local Dispatch, that you are in the substation performing maintenance.									
2)	Visually inspec	et general condition	n of equipmen <u>Condition</u>	nt: <u>Needs Attn</u> .	Remarks					
	a) Bushingsb) Oil Levelsc) Oil Leaksd) Control Cae) Groundingf) Animal gua	connections								
2)	Check fuses, h thermostats.	eaters and								
3)	Tap Changer: a) Note numb b) Note opera	er of operations ting range:	fromto							
	e) Is the coun	changer rough neutral?								
<u>C</u>	omments:									

Complete inspection sheets and return to office.

Xcel Energy - North	DRAWN SIS	FILMED	REV EM&P PHYSICAL APPARATUS PROCEDURES		
ELECTRIC MAINTENANCE &	CHECKED/ ATJ	APPROVED			
Protection	DATE 1/4/01		5	SHEET 5 of 8	APP - 2.01.01

OIL CIRCUIT BREAKER INSPECTION LIST

(attach as many sheets as necessary)

	(attach as many shocks as not essent)						
	Substation Breaker #						
Inform – Systems Operation, Trouble Foreman or Local Dispatch, that you are in the substation performing maintenance.							
()	Visually inspect general condition of equipment: Needs						
3)	a) Bushings (oil levels, broken etc.) b) Main tank (oil levels) c) Oil Leaks d) Grounding connections e) Animal guards f) Control Cabinet g) Is the BKR schematic in the control cabinet? Check fuses, heaters and thermostats.						
	Compressor (as applicable) a) Note hours of run-time b) Check belt, oil level, check valve, and pulleys c) Oil leaks						
)	Mechanism a) Visually inspect general condition. b) Clean mechanism cabinet. c) Check fuses, heaters & thermostats. d) Pneumatic: Weather permitting: drain moisture from air tanks and check pressure switches. e) Hydraulic: Lower pressure, check pressure switches, and pre-charge.						
<u> </u>	omments:						

Complete inspection sheets and return to office. SUBSTATION IN-SERVICE INSPECTION

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED/ ATJ	APPROVED			
PROTECTION	DATE 1/4/01	<u></u>	5	SHEET 6 of 8	APP - 2.01.01

GAS CIRCUIT BREAKER INSPECTION LIST (attach as many sheets as necessary)

	Substation Breaker #							
1) Inform – Systems Operation, Trouble Foreman or Local Dispatch, that you are in the substation performing maintenance.								
2)	Vis	ually inspect general condition of equi	pment:	Needs				
		Cond	itionAttn. I	<u>Remarks</u>				
	a)	Bushings (oil levels, broken etc.)						
	b)	Main tank						
	f)	Animal guards						
	c)	Gas pressure (s)						
	d)	Grounding connections						
		Control Cabinet						
	f)	Is the BKR schematic in the control cabinet?						
	g)	Note any conditions requiring an						
	0)	outage to repair.			· · · · · · · · · · · · · · · · · · ·			
3)	Ch	eck fuses, heaters and thermostats.						
4)	Co	mpressor (as applicable)						
•		Note hours of run-time						
	b)	Check belt, oil level, check valve,						
	,	and pulleys						
	c)	Oil leaks						
5)	M	echanism						
٦)		Visually inspect general condition.						
		Clean mechanism cabinet.						
		Check fuses, heaters & thermostats.						
		Pneumatic: Weather permitting:						
	u)	drain moisture from air tanks and						
		check pressure switches.						
	e)	Hydraulic: Lower pressure, check						
	•)	pressure switches, and pre-charge.						
<u>C</u>	omi	ments:						
_		Complete inspection	sheets and r	return to office.				

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL APPARATUS PROCEDURES		
	CHECKED/ ATJ	APPROVED				
PROTECTION	DATE 1/4/01		5	SHEET 7 of 8	APP - 2.01.01	
1 KOLECTION	DAIL XI II O X		I			

IN-SERVICE INSPECTION PARTS LIST FOR TRUCKS

		TRUCK #	
EQUI	PMENT	NEEDED:	
Stk.	Reg.	Description -	<u>OK?</u>
	1 EA	1/2", 3/8", 1/4" Plugs for end of Ball Drain Valve	 .
	3 EA	1/2" Ball Check Drain Valve	
	3 EA	3/8" Ball Check Drain Valve	
	3 EA	1/4" Ball Check	
	50 EA	Tags for Safety Valve & Compressor	
	1 EA	5 Gallon 427 Oil	
	2 EA	5 Gallon Waste Container	
Safety	Relief V		
	2 EA		
	2 EA		
	2 EA		
	2 EA	100#	
		In Service Inspection Forms.	
		Gas-in-Oil Test Kits	
	1 EA	Extra Ohm Meter	
		Belts and/or material to make ('make-a-belt")	
	misc.	Heater elements)	
		(120 & 240volts AC, 50, 100, 250 & 350 watt)	
	misc.	Thermostats	
Conn	ection Ha	rdware & Tools	
	1 box	1/2" x 1 3/4" aluminum bolts, stk # 01-5991 (100 bolts)	
	l box	1/2" x 2 1/4" aluminum bolts, stk # 01-5992 (100 bolts)	
	l box	1/2" x 3" aluminum bolts, stk # 01-5995 (100 bolts)	
	l box	1/2" aluminum nuts, stk # 01-5995 (100 nuts)	
	1 EA	Stainless steel brush for aluminum hardware, Stk # NS-4804	
	LEA	2-pronged V-shaped wire brush, stk # NS-4808	

Complete inspection sheets and return to office.

Xcel Energy - North	drawn SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
	CHECKED/ ATJ	APPROVED			
	DATE 1/4/01		5	SHEET 8 of 8	APP - 2.01.01

Substation Battery Maintenance

1. Purpose

The purpose of this procedure is to provide general instructions for inspection and maintenance of Lead Acid Stationary Batteries in Substation.

2. Definitions

- 2.1. <u>Battery Thermometer</u> A special thermometer usually calibrated in (F°) with a linear scale designed to indicate specific gravity correction for cell temperature.
- 2.2. <u>Cell-Corder Storage Battery Multi-meter</u> A special instrument used to record, and test a batteries cells for "Float Voltage", "Internal Cell Resistance", "Inter-Cell Connection Resistance", and record either manually or electronically a cells "Specific Gravity".
- 2.3. Constant Current Charge A charge in which the current output of the charger is maintained at a constant value. Sometime this may be accomplished using two-rate charging.
- 2.4. <u>Constant Potential Charge</u> A charge in which the potential (or voltage) at the output terminals of the battery charger is maintained at a constant value. (Also called Constant Voltage Charge).
- 2.5. <u>Electrolyte</u> A conducting medium in which the flow of electric current takes place. The electrolyte in a lead-acid cell is a solution of sulfuric acid (H₂SO₄) and water. The electrolyte in a nickel-cadmium cell is a solution of potassium hydroxide (KOH) in water.
- 2.6. Flame-Arrestor Vent A cell-venting device which prevents the propagation of an external flame into the cell. It is to be kept in place at the top of each cell for maintenance and charging. Also referred to as a "Safety Vent".
- 2.7. Gassing Evolution of gas by one or more of the plates in a cell. Gassing may result from electrolysis of water into hydrogen and oxygen within a cell during charging (normally near the end of a charge), from overcharging, or from local action.
- 2.8. Equalize Voltage The maximum voltage at which a battery is charged. The "equalize" voltage corrects voltage irregularities between cells by overcharging them.
- 2.9. Float Voltage The minimum voltage at which the battery is maintained or charged.
- 2.10. <u>Hydrometer</u> An electronic or syringe device used to measure the specific gravity or a battery cells electrolyte density and determine the cells' state of charge.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	PPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
PROTECTION	DATE 1/28/99		1	SHEET 1 of 11	APP - 6.02.02

- 2.11. <u>Inter-cell connector</u> Lead plated rigid copper connector used to connect individual battery cells together, generally in series.
- 2.12. <u>Inter-cell connection resistance</u> The total electrical resistance of the connection between the terminals of two cells that are electrically connected to each other. Resistance is expressed in micro-ohms, and is measured by a micro-ohmsmeter or similar device.
- 2.13. <u>Internal impedance</u> The resistance of a cell to an alternating current of a specific frequency.
- 2.14. <u>Internal Resistance</u> The resistance of a cell to an electric current within a cell. See Cell-Corder multi-meter.
- 2.15. <u>Lead Selenium Battery Cells</u> A lead-acid cell with plates or grids made from a lead-antimony alloy to which selenium has been added. Charging characteristics are similar to Lead Calcium battery cells.
- 2.16. <u>Lead Antimony Battery Cells</u> A style of battery with Antimony grids which requires periodic "Equalizing" approximately every 30 to 90 days to bring the battery back to full capacity.
- 2.17. Lead Calcium Battery Cells A type of battery cell with calcium grids similar in appearance to the Lead Antimony type, which must be "Float Charged" at a higher voltage. These cells do not require periodic "Equalizing" when maintained at the proper voltage. However "Equalizing" shall be performed on this style of battery when scheduled maintenance is performed or when problems are encountered, requiring maintenance of the battery.
- 2.18. <u>Pilot Cell of Battery</u> One (1) or two (2) cells in a series battery string picked for monitoring purposes to indicate a battery's general state of charge or condition. The cell picked is usually the one in the string that has the lowest specific gravity or is picked at the discretion of the inspector for monitoring purposes.
- 2.19. Post To Cover Seal The seal between the post and the cover where the post penetrates the cover.
- 2.20. Sealed or Absorbed Electrolyte Valve Regulated Lead Acid (V.R.L.A.) Battery Cells. Also known as Absorbed Glass Mat or A.G.M. A completely sealed cell with no provisions to sample specific gravity or examine internal components. This type of cell is generally arrange in modules and must be "Float Charged" at a higher voltage. These cells do not require periodic "Equalizing" when maintained at the proper voltage. However "Equalizing" shall be performed on this style of battery

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	PPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
PROTECTION	DATE 1/28/99		1	SHEET 2 of 11	APP - 6.02.02

- when scheduled maintenance is performed or when problems are encountered, requiring special maintenance.
- 2.21. Service Life The period of time during which a fully charged battery is capable of delivering at least a specified percentage of its rated capacity. For most lead-acid battery designs this percentage is 80 %. (Also called END OF LIFE or USEFUL LIFE).
- 2.22. Thermal Runaway A condition whereby a cell on charge or discharge will destroy itself through internal heat generation caused by high overcharge or over discharge current or other abusive condition such as high ambient temperature. All batteries generate heat due to electro-chemical reactions, however A.G.M. batteries are especially susceptible to this condition.
- 2.23. <u>Valve</u> A normally sealed mechanism which allows for the controlled escape of gasses from within a cell. See Absorbed electrolyte cell or V.R.L.A. (Valve Regulated Lead Acid) cells.
- 2.24. "As Found" Measurements made before any cleaning, adjusting, or repairing is done on a battery.
- 2.25. "As Left" Measurements made after cleaning, adjusting, and repairing have been completed on a battery.
- 2.26. <u>Maintenance Provider Technician</u> That individual, trained and qualified in accordance with appropriate Testing Instructions and procedures, who has been designated by the Maintenance Provider as having the responsibility for the correct performance of the work required by this procedure.
- 2.27. <u>Supervisor</u> The person designated with the responsibility to authorize the start of work activities.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	PPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
PROTECTION	DATE 1/28/99		1	SHEET 3 of 11	APP - 6.02.02

3. Equipment Needed

- 3.1. The maintenance provider personnel shall assure that all instruments used are in good working condition, within calibration dates and shall display a current calibration sticker.
- 3.2. Battery cell specific gravity reading hydrometer (Syringe type) may be used, but first its accuracy shall be verified by comparing its reading with another hydrometer. Variances of \pm 0.005 are acceptable.
- 3.3. Electronic specific density gravity meters, such as the Anton Paar type DMA-35 or the Alber Corp. Hydrostik, type DSG-30.
- 3.4. Alber Corp. Cell-corder type CLC-200 with firmware version 2.03, electronic data logging multi-meter.
- 3.5. Micro-ohms Meter Low Resistance Test Set, such as Alber Corp. RT3-100L, 100 amps.
- 3.6. AVO International Battery Impedance Test Set, such as the M-Bite or E-Bite system.
- 3.7. Digital multi-meter, <u>3 1/2 digit model</u>.
- 3.8. The following equipment is recommended to perform this maintenance:

NOTE: Most equipment is available from Curtin Matheson Scientific Inc., Telephone # 934-1793 or battery vendors, such as H.M. Cragg Co., Telephone # 884-7775.

- 3.8.1. Pressurized spill gun acid neutralizer, such as spill-X-A model SC-30-A.
- 3.8.2. Two (2), five (5) gallon carboy water bottles filled with approved demineralized water. Water can be obtained from the battery shop: cat.#031-682, carboy bottles with caps.
- 3.8.3. Twenty-five (25) lbs of bicarbonate of soda, available from Hawkins Chemical Inc.
- 3.8.4. Two (2) specific gravity hydrometers, type C&D Co., part no. PL538, range 1.170 1.240. Preferred use is Electronic Hydrometers
- 3.8.5. Battery type thermometers, type C&D Co., part no. PL645 or Electronic Thermometer. See Instruments and Calibration section.
- 3.8.6. Calibrated torque wrench, 3/8 " drive, 5 to 200 inch pounds.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
PROTECTION	DATE 1/28/99		1	SHEET 4 of 11	APP - 6.02.02

- 3.8.7. Battery cell filling container for adding water to individual cells or electric watering pump cart, 8 gallon, type Model CRT-2A, with watering gun type S.
- 3.8.8. Various hand tools, wrenches, 3/8" socket set drive, rags, etc.
- 3.8.9. Two (2) pails, polyethylene type, cat. no. 040-253.
- 3.8.10. Three (3) sets of rubber neoprene gloves, light weight type, size 9, cat. no. 200-899.
- 3.8.11. Two (2) light weight black rubberized cloth aprons, 36" to 46", cat. no. 021-733.
- 3.8.12. Twelve (12) buffered eyewash solutions, such as North Sterile Isotonic bottles, no. 12-60-37.

4. References

- 4.1. Alcad, Lead Acid Battery Operating Instructions.
- 4.2. C & D Co., Standby Battery Flooded Cell Installation and Operating Instructions, No. 12-800.
- 4.3. C & D Co Liberty Series 1000, Valve Regulated Installation and Operating Instructions, No RS-990.
- 4.4. C & D Co Liberty Series 2000, Valve Regulated Installation and Operating Instructions, No RS-991.
- 4.5. YUASA Exide, <u>Instructions for Installation and Operating Stationary Battery</u>, section 58.00.
- 4.6.G.N.B., <u>Installation and Operating Instructions for Absolyte 11P Batteries</u>, section 92.61.
- 4.7. G.N.B., Stationary Battery Installation and Operating Instruction, section 8-05.
- 4.8. Johnson Controls (Globe), <u>Installation and Operating Instructions for Stationary Lead Acid Battery Cells.</u>
- 4.9. Varta, Stationary Battery Installation and Operating Instructions, section 16-202.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P	PHYSICAL A	PPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED				
PROTECTION	DATE 1/28/99		_ 1	SHEET	5 of 11	APP - 6.02.02

5. Procedure

5.1. Precautions

- 5.1.1. Before touching a battery cell, static electricity should be discharged from the body by first touching station ground or battery grounded rack.
- 5.1.2. Battery cells connected in series may have high potentials, thus producing a human shock hazard. Therefore, the battery and station ground should not be touched or leaned on at the same time.
- 5.1.3. Arcing, smoking and open flame are prohibited within the battery room and vicinity.
- 5.1.4. Metal tool handles used for tightening battery cell connector bolts shall be insulated.
- 5.1.5. Safety equipment is to be worn by all personnel in the battery area. Safety glasses shall be worn at all times. Rubber gloves and rubber aprons should be worn when handling acid or moving battery cells around.
- 5.1.6. Do not open battery circuits, jumper cells or connect any load producing equipment to a battery or its cells.
- 5.1.7. Be aware of the high voltage potentials within the battery charger while taking readings or otherwise checking its operations.
- 5.1.8. Use approved demineralized water when adding water to a battery cell.
- 5.1.9. <u>WARNING:</u> Adding contaminated water, metal or other impurities to battery cells will cause damage to the cell.
- 5.1.10. Do not over tighten cell connections; this will cause damage to battery posts and/or seals and attribute to battery failure, and high connection resistance's.
- 5.1.11. Avoid contact with the battery electrolyte (Sulfuric Acid) or Nickel Cadmium (Potassium Hydroxide) solutions. Contact will cause severe burns to exposed skin and damage to clothing. For skin if contacts occur, immediately flush skin with water and then flush clothing immediately remove the soiled item and flush with water then neutralizer solution.
- 5.1.12. Do not use solvents or chemicals to clean batteries.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	PPARATUS PROCEDURES
ELECTRIC MAINTENANCE & PROTECTION	CHECKED DATE 1/28/99	APPROVED	1	SHEET 6 of 11	APP - 6.02.02

5.1.13. Do not over fill battery cells when adding demineralized water. Electrolyte levels for each cell must be at or within the indicator lines marked on each cell.

Note: Keep safety vents (Flame Arresters) in place on cells whenever possible.

5.2. Instructions

NOTE: Use pen in completing all forms. Results of the following steps shall be documented on the forms attached. Each step of these instructions shall be initialed prior to starting the next step.

NOTE: The following steps (5.2.4, 5.2.5, 5.2.8, 5.2.10, and 5.2.14) may be N/A in this procedure, and all data can be recorded using the Albertorp Cell-Corder model CLC-200. See Definitions section.

- 5.2.1. Verify Supervisor has authorized work to start.
- 5.2.2. All initials shall be identified below: Initial Print Name

- 5.2.3. Check station battery charger for correct "FLOAT" and "EQUALIZE" voltage operation. Refer to **Table I** in **Appendix A** for correct voltage settings of types and number of cells to be work on.
- 5.2.4. Remove all battery cell filler dust caps and record the electrolyte temperature of at least three (3) cells in the battery.

Cell-corder

- 5.2.5. Measure and record every cell specific gravity, using the station hydrometer, or one known to be accurate as described in the instrument and calibration section. Correct specific gravity readings for temperature variations back to 77° F by using the following rule:
 - 1. For every 3° F above 77° F, add 0.001 to the specific gravity reading.
 - 2. For every 3° F below 77° F, subtract 0.001 to the specific gravity reading.

Cell-corder

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	PPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
PROTECTION	DATE 1/28/99		1	SHEET / of 11	APP - 6.02.02

5.2.6.	Check battery cell electrolyte level. NOTE: The approximate level in relation to the two indication lines on each cell. Record: Any cells which have excessively low or high levels, as this will affect the specific gravity readings.	
5.2.7.	If electrolyte level is more than 1/2" below the high line marked on the cells, add sufficient demineralized water to bring the level back to this line. Use approved water or demineralized water. Replace all battery filler caps previously removed.	
	NOTE: Electrolyte level is measured from the full level mark on C&D, Varta and GNB batteries and between the two level marks on YUASA Exide type cells.	
5.2.8.	With battery charger still on "FLOAT" voltage, record individual cell voltage readings and charger output current, as indicated by its ammeter on Stationary Battery Report in Appendix A Verify battery charger DC output meter reads correctly by checking battery voltage at battery DC bus or terminals with digital meter. If necessary readjust the voltmeter on the charger to indicate correct voltage if necessary.	Cell-corder
5.2.9.	Place charger on "EQUALIZE" charge. Observe charger voltmeter and ammeter. Charger should raise battery voltage to "EQUALIZE" voltage. Refer to Table I on Appendix A for correct voltage and settings.	
5.2.10	. Allow charger to stabilize battery voltage and current for 15 - 30 minutes. Then record all cell "EQUALIZING" voltages on Stationary Battery Report in Appendix A.	Cell-corder
5.2.11	. Switch charger back to its float voltage setting.	
5.2.12	Check battery polarities to station ground for any voltage indications, or grounds. Record if any in "comments section".	
5.2.13	Physically examine all battery cells from both the front and back side. Observe each cell for the following abnormalities and circle any items observed exhibiting these abnormalities. Record any observations in the "comment section".	
	 Broken or deteriorated plate elements to its bus bar or comb connection areas within each cell thru its container if visible. SUBSTATION BATTERY MAINTENANCE 	

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	PPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
PROTECTION	DATE 1/28/99		1	SHEET 8 of 11	APP - 6.02.02

2.	Discolored positive or negative plates. Compare to adjacent cells. Examine for signs of Copper Contamination's, as indicated by reddish/brown negative plates or discolored electrolyte.	
3.	. Check for electrolyte leakage, cracks in cell containers, or seals between posts and cover, cover to jar seals and examine underside of cells (container bottoms) if accessible.	
4.	. Abnormal electrolyte color or levels.	
5	. Abnormal sediment color or sediment levels below negative, and positive plates.	
6	6. Observe cell plates for excessive expansion, as indicated by cracks or bulges in the cell container and its cover.	
7	7. Suspended or floating objects in electrolyte.	
8	3. List any other observed abnormalities in comment section.	
t I t	Examine inter-cell connectors, and connections at cell posts for corrosion and tightness. Use a calibrated torque wrench to check the torque of each inter-cell connector to the values noted in Table II in Appendix A . Complete inter-cell, inter-rack or step connection resistance tests using a micro-ohmmeter and record these values on Intercell Connection Test Report in Appendix A . Designate with an asterisk those values for cable connections or connections other than standard inter-cell rigid connectors.	Cell-corder
5.2.15.]	If the battery is dirty or wet with acid, wash with a water- moistened cloth and/or an approved neutralizing agent.	
:	NOTE: A 6% clear Ammonia and water solution may be used on some cells to clean the battery, this solution should be mixed to the consistency of household cleaning solutions. Do not use on polycarbonate containers or where ventilation is a problem.	
	WARNING: Do <u>not</u> use HYDROCARBON agents (oil distillates) or ALKALINE cleaners. These products may cause the jar containers to crack and/or craze. Neutralize any electrolyte spills with distilled water or diluted BICARBONATE of SUBSTATION BATTERY MAINTENANCE	

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	PPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
PROTECTION	DATE 1/28/99		1	SHEET 9 of 11	APP - 6.02.02

5.3.4. Reviewed by Engineer.

	BAKING SODA in mixture of 1 pound soda to 1 ganon of distilled water. Clean or wash polycarbonate containers with clear water only.	
5.2.16.	Select a new pilot cell for monitoring purposes. The pilot cell is generally the lowest specific gravity cell in the battery. However, the cell picked may be any cell which at the discretion of the inspector, indicates it should be monitored more closely.	
5.2.17	Mark the pilot cell denoting the date of this inspection and record the identification of the pilot cell on the attached data sheet.	
5.3. <u>Close</u>	-out	
5.3.1.	Assure all data forms are completed and attached.	
5.3.2.	When the above has been completed, return this completed procedure to the Supervisor.	
5.3.3.	Reviewed by Supervisor.	

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	PPARATUS PROCEDURES
ELECTRIC MAINTENANCE & PROTECTION	DATE 1/28/99	APPROVED	1	SHEET 10 of 11	APP - 6.02.02

REVISION HISTORY

Revision

Comments

1 1/28/99

Removed 120 cell data sheets - not used in

substations.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	PPARATUS PROCEDURES
ELECTRIC MAINTENANCE & PROTECTION	DATE 1/28/99	APPROVED	1	SHEET 11 of 11	APP - 6.02.02

STATIONARY BATTERY REPORT

		101112212				
□ ROUTINE		□ SPECIAL		□ INITIAL		
LOCATION			PLANT			
I.D. NO.			BATTER	Y DATE		
BATTERY TYPE			INSPECT	TION DATE		
CELL TEMP. ° F	TOP		MIDDLE		BOTTOM	
FLOAT VOLTS		EQUALIZE VOLTS		LOAD AM	PS	
I LOZII TODIO						

	CELL DATA READINGS							
Cell No.	Float	Equalize	Spec Grav		Cell No.	Float	Equalize	Spec Grav
1.	2.	2.	1.2		31.	2.	2.	1.2
2.	2.	2.	1.2		32.	2.	2.	1.2
3.	2.	2.	1.2		33.	2.	2.	1.2
4.	2.	2.	1.2		34.	2.	2.	1.2
5.	2.	2.	1.2		35.	2.	2.	1.2
6.	2.	2.	1.2		36.	2.	2.	1.2
7.	2.	2.	1.2		37.	2.	2.	1.2
8.	2.	2.	1.2		38.	2.	2.	1.2
9.	2.	2.	1.2		39.	2.	2.	1.2
10.	2.	2.	1.2		40.	2.	2.	1.2
11.	2.	2.	1.2		41.	2.	2.	1.2
12.	2.	2.	1.2		42.	2.	2.	1.2
13.	2.	2.	1.2		43.	2.	2.	1.2
14.	2.	2.	1.2		44.	2.	2.	1.2
15.	2.	2.	1.2		45.	2.	2.	1.2
16.	2.	2.	1.2		46.	2.	2.	1.2
17.	2.	2.	1.2		47.	2.	2.	1.2
18.	2.	2.	1.2		48.	2.	2.	1.2
19.	2.	2.	1.2		49.	2.	2	1.2
20.	2.	2.	1.2		50.	2.	2.	1.2
21.	2.	2.	1.2		51.	2.	2.	1.2
22.	2.	2.	1.2		52.	2.	2.	1.2
23.	2.	2.	1.2		53.	2.	2.	1.2
24.	2.	2.	1.2		54.	2.	2.	1.2
25.	2.	2.	1.2		55.	2.	2.	1.2
26.	2.	2.	1.2		56.	2.	2.	1.2
27.	2.	2.	1.2		57.	2.	2.	1.2
28.	2.	2.	1.2		58.	2.	2.	1.2
29.	2.	2.	1.2		59.	2.	2.	1.2
30.	2.	2.	1.2		60.	2.	2.	1.2

Comments:

ı	XCEL ENERGY	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
	ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
	PROTECTION	DATE 1/26/99		0	SHEET 1 of 6	APP - 6.02.02

STATIONARY BATTERY REPORT INTER-CELL CONNECTION TEST

LOCATION	PLANT	
I.D. NO.	BATTERY DATE	
	INSPECTION DATE	
BATTERY TYPE	NEG. TERM. TO NEG. BUS	
POS. TERM. TO POS. BUS	NEG. TERM. TO REG. DOS	

CELL NO.	MICRO- OHMS	CELL NO.	MICRO-OHMS	CELL NO.	MICRO-OHMS
1 to 2	/	21 to 22	/	41 to 42	
2 to 3		22 to 23	/	42 to 43	
3 to 4		23 to 24	/	43 to 44	
4 to 5		24 to 25		44 to 45	
5 to 6		25 to 26	/	45 to 46	
6 to 7		26 to 27		46 to 47	/
7 to 8		27 to 28		47 to 48	/
8 to 9		28 to 29		48 to 49	/
9 to 10		29 to 30		49 to 50	/
10 to 11		30 to 31		50 to 51	/
10 to 11		31 to 32		51 to 52	
		32 to 33		52 to 53	/
12 to 13		33 to 34		53 to 54	
13 to 14		34 to 35		54 to 55	
14 to 15		35 to 36		55 to 56	
15 to 16		36 to 37		56 to 57	
16 to 17				57 to 55	
17 to 18		37 to 38		58 to 59	
18 to 19		38 to 39			
19 to 20	/	39 to 40		59 to 60	
20 to 21	/	40 to 41			

Identify inter-cell cable connections between racks or shelves (tiers) with an asterisk *.

Comments:			—
	 -		_
	······································		

XCEL ENERGY	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED		SHEET 2 of 6	APP - 6.02.02
PROTECTION	DATE 1/26/99			SHEET 2010	AFF - 0.02.02

TABLE NO. I VOLTAGE FOR LEAD ACID BATTERIES WITH 1.215 SPECIFIC GRAVITY FLOAT VOLTAGE

NO. OF CELLS	LEAD ANTIMONY	LEAD CALCIUM, LEAD SELENIUM	SEALED VRLA ABSORBED GLASS MATT
	(Normal Cell Volts)	(Normal Cell Volts 2.25)	(Normal Cell Volts 2.25)
	2.17 to 2.19	See note 1	See note 2
11		24.8	25.0
12	26.0	27.0	27.0
23		51.8	52.0
24	52.0	54.0	54.0
58	32.0	130.5	131.0
60	130.2	135.0	135.0
120	260.5	270.0	

EQUALIZE VOLTAGE (2.33 VOLTS PER CELL) INCLUDES VRLA TYPES

NO. OF CELLS	LEAD ANTIMONY	LEAD CALCIUM, LEAD SELENIUM
11	25.6	25.6
12	28.0	28.0
23	54.0	54.0
24	56.0	56.0
58	135.0	135.0
60	140.0	140.0
120	280.0	280.0

NOTE: (1) Lead Selenium batteries such as ALCAD, and VARTA are 1.240 specific gravity, but maybe Float charged at 2.23 to 2.25 VDC.

NOTE: (2) Sealed VRLA (Valve Regulated Lead Acid) types may be floated between 2.21 to 2.27 VDC depending on cell temperature and manufacture specifications. Refer to appropriate Instruction manuals.

XCEL ENERGY	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED		011777 3 . C.	ADD (02.02
PROTECTION	DATE 1/26/99	<u> </u>	0	SHEET 3 of 6	APP - 6.02.02

TABLE II INTER-CELL CONNECTOR <u>RETORQUE</u> VALUES

ALCAD	TORQUE VALUES (INCH POUNDS)
Alexa	
SD, SDH (ALL)	80

CAR CO CELLS	TORQUE VALUES (INCH POUNDS)
C&D CO. CELLS	TORQUE VILLUES (III VILLUES)
20111111	60
DCU Multi cells	100
D Type Single cells	
JC (All)	100
KC & KCR - 5 thru 13	100
KC & KCR - 15 thru 21	125
LCT (All)	100
LCR - 19 thru 33	125
LIBERTY 2000 VRLA CELLS (All)	125
LIBERTY 1000 VRLA cells	
25 thru 50 A.H. size	40
55 thru 300 A.H. size	100
XTJ and XTK	125
XTL (All)	125

YUASA EXIDE CO. CELLS	TORQUE VALUES (INCH POUNDS)			
CA, CC, CX (All)	65			
DMP (All)	60			
EMP, EU, EX-5 thru 15	110			
EA, EC	65			
EHGS, FTA,FTC (All)	110			
ES - 5 thru 13	65			

G.N.B. CO. CELLS	TORQUE VALUES (INCH POUND			
D Type (All)	100			
M and N Types 1/8" bars	100			
M and N Types 1/4" bars	150			
ABSOLYTE II (Sealed Cells)	100			
PDQ, N and H Types	150			

XCEL ENERGY	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC M AINTENANCE &	CHECKED	APPROVED			LDD (02.02
Protection	DATE 1/26/99	<u> </u>	0	SHEET 4 of 6	APP - 6.02.02

JOHNSON CONTROL (GLOBE) CELLS	TORQUE VALUES (INCH POUNDS)
G Series (Lead Nuts)	85
G Series (Stainless)	60
UPX (8 Volt Cells)	85
UPX (2 Volt Cells)	125

VARTA CELLS	TORQUE VALUES (INCH POUNDS)
Vb 428 thru Vb 611	66
Vb 2305 & Vb 2420	220
OPZS	220

NOTE: Torque Values shown are to be used for re-torque of connections after initial installation. Any question or battery types not listed consult with Electric Maintenance or Manufactures Instruction Manuals.


CAUTION: Be aware of connection hardware (bolts/nuts) which may strip or turn too many times when being torqued. Such cases may indicate faulty hardware or torque values, or terminal post problems.

Generally, all battery connections should be torqued to the values specified annually. Exceptions to this recommendation, would be batteries which are heavily loaded or received excessive discharge events, such as UPS batteries or faulted DC systems.


If such event discharges occur, then it is recommended this procedure be reimplemented, and the battery system be re-examined for any changes.

XCEL ENERGY	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE & PROTECTION	CHECKED DATE 1/26/99	APPROVED	0	SHEET 5 of 6	APP - 6.02.02


TYPICAL SINGLE OR PARALLEL POST INTERCELL CONNECTIONS

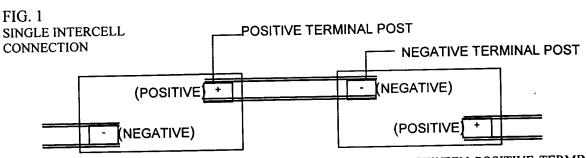

MEASURE INTERCELL CONNECTION RESISTANCE BETWEEN POSITIVE TERMINAL POST TO THE NEGATIVE TERMINAL POST.

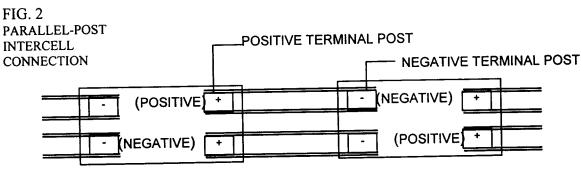

MEASURE INTERCELL CONNECTION RESISTANCES BETWEEN BOTH PARALLEL-POST CONNECTIONS AND COMPARE VALUES.

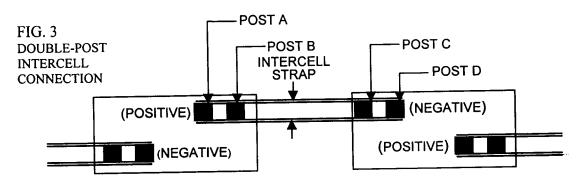

MEASURE INTERCELL CONNECTION RESISTANCES BETWEEN POST "A" TO POST "C", AND POST "B" TO POST "D" AND COMPARE VALUES.

XCEL ENERGY	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			4 DD (02 02
Protection	DATE 1/26/99		0	SHEET 6 of 6	APP - 6.02.02

ABB HPL Circuit Breaker Timing

PROCEDURE INTERFACE REVIEWS AND APPROVALS

1. Reviews By	ř
Plant System Engineer	Date
2. Work Initiation Requirements	
Request for Outage Number:	
Substation Work Request Number (SWR):	
3. Work Completion Review	
Responsible EM Personnel	Date
Work Completed and Released Responsible Supervisor EM	Date

TIMING ABB HPL CIRCUIT BREAKERS

1	Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ı	ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
	PROTECTION	DATE 2/11/98		0	SHEET 1	APP - 6.010.02.05

1.0 PURPOSE

The purpose of this procedure is to provide instructions for the Timing of ABB Breakers.

2.0 APPLICABILITY

This procedure shall apply to work performed by Electric Maintenance (EM)personnel.

3.0 ADHERENCE

- This procedure shall be adhered to except where it is found to be in error or when 3.01 it is found not to apply to existing plant conditions. In the event of an emergency, personnel shall take actions so as to minimize personnel injury and damage to the facility.
- Temporary Changes to this procedure shall be written in at the appropriate 3.02 location in the procedure.

4.0 **DEFINITIONS**

Electric Maintenance (EM) Technician

That individual, trained and qualified in accordance with appropriate EM Testing Instructions and procedures, who has been designated by the EM Supervisor as having the responsibility for the correct performance of the work required by this procedure.

5.0 REFERENCES

- ABB Reference Manual for type HPL 362-550/25B2 Breakers. 5.01
- Instruction Manual for Cucamonga Timer Consolidated American Systems LTD. 5.02

6.0 PRECAUTIONS

- EM personnel shall take necessary precautions to prevent accidental contact with high voltage equipment as per the XCEL ENERGY Safety Manual.
- Verify that all required grounds are properly attached. 6.02

7.0 INSTRUMENTS

- The EM personnel shall assure that all instruments used are in good working condition. For any/all instruments found NOT in good working condition inform the lead person and return instrument for repair.
- List the instruments used when performing this work on form EMI 8-005-1. 7.02

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PH	YSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED				
PROTECTION	DATE 2/11/98		0	SHEET	2	APP - 6.010.02.05

9.04

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PF	IYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			_	
PROTECTION	DATE 2/11/98		0	SHEET	3	APP - 6.010.02.05

10.0 INSTRUCTIONS

NOTE: Use pen in completing all forms. Results of the following steps shall be documented on this procedure. Each step of these instructions shall be initialed.

NOTE: Record (List) any changes that are made to the breaker on page 8 of this procedure, TEMPORARY CHANGES SECTION. This includes, but is not limited to any wires that may be disconnected or jumpers added and alarm switch position changes.

		Completed by	Verified by
10.01	Verify that MODs on each side of the breaker are open and disengaged with HOLD cards properly attached.		
10.02	Verify that grounds are properly attached.		
10.03	Call System Operations and Shift Supervisor for clearance and permission to start work.		
10.04	Verify breaker is closed/close breaker.		
10.05	Open Trip and Close knife switches in control cabinet.		
10.06	Secure AC and DC voltage sources in open position.		
10.07	Connect timing test set to breaker in accordance with users manual.		
10.08	Disconnect Grounds.		
10.09	Connect trip trigger to trip coil #1 (11 and neg). Connect push button between 11 to POS.		
10.01	Connect close trigger to close coil (7 and neg). Connect push button between 7 to POS.		
10.01	1 Return AC and DC power to breaker, close all control switches.		
10.01	2 Check closed/close breaker.		

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSIC	CAL A	PPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED		avin na	.	ADD (010.02.05
PROTECTION	DATE 2/11/98		0	SHEET 4	4	APP - 6.010.02.05

		Completed by
21 +3ms). left	EN timing shot, record contact times (max right	
A phase B phase C phase		i
10.014 Perform CL (max 90ms) left	OSE timing shot, record contact times right	
A phase B phase C phase		
10.015 Perform OF 21 +3ms). left A phase B phase C phase	PEN timing shot, record contact times (max right	
(max 60ms	LOSE-OPEN timing shot, trip-free times). Use a jumper for the trip (close with push per on trip).	
left A phase B phase C phase	right	
10.017 Perform C (max 90ms left A phase B phase C phase	LOSE timing shot, record contact times s). right	
10.018 Move Trip 2 knife bla	trigger to trip coil #2 (11A and neg on Trip de). Connect push button between 11A and rip 2 knife blade.	

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL APPARATUS PROCEDURES			
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			_		
PROTECTION	DATE 2/11/98		0	SHEET	5	APP - 6.010.02.05	

		Completed by
	PEN timing shot, record contact times (max	
22 +3ms). left	right	
A phase		
B phase		
C phase		
10.020 Perform C	CLOSE timing shot, record contact times	i
(max 90m		
left	right	
A phase		
B phase C phase		
_		
	OPEN timing shot, record contact times (max	
21 +3ms)	•	
left	right	
A phase		
B phase		
C phase		
10 022 Perform (CLOSE-OPEN timing shot, record trip-free	
times (ma		
left	right	
A phase		
B phase		
C phase		
10.023 Perform	CLOSE timing shot, record contact times	
(max 90r		
1.0	منا مالية	
left A phase	right	
B phase		
C phase		
	to a satisfications if out of	
10.024 Verity ti	ming results are within specifications, if out of tion, consult ABB manual for adjustment	
procedur		
•		
10.025 Remove	AC and DC power from breaker, open trip	
and close	e knife switches.	

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PH	IYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			_	. DD (010.03.05
PROTECTION	DATE 2/11/98		0	SHEET		APP - 6.010.02.05

	Completed by
10.026 Install grounds.	
10.027 Remove timing test set leads from breaker.	
10.028 Open breaker.	
10.029 Return all items listed on (page 8) this page to their As Found condition.	i
10.030 Assure all required work completion signatures are entered on this procedure.	
10.031 Attach final timing results to procedure.	
10.032 Return the complete procedure, with attachments to the Responsible Electric Maintenance Supervisor for review and signature.	

Xcel Energy - North	DRAWN SIS	FILMED	REV EM&P PHYSICAL APPARATUS PROCEDURES			
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			_	. == < 040.00.05
PROTECTION	DATE 2/11/98		0	SHEET	7	APP - 6.010.02.05

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PH	YSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			•	ADD (010.02.05
PROTECTION	DATE 2/11/98		0	SHEET	8	APP - 6.010.02.05

FUNCTIONAL VALUES

SF6 circuit-breaker type HPL 362-420/25B2-31B2 with operating mechanism type BLG 1002.

Closing time

Maximum 90 ms

Opening time coil I

21 +3 ms (max 21.5 ms) **

Opening time coil II

21 +3 ms (max 21.5 ms) **

Close-open *

Maximum 60 ms

Resistance of the main circuit across the breaking unit:

Maximum 72 at rated current = 2500 A Maximum 50 at rated current = 3150 A

- *) Close-open time means the time during which the main contacts are closed at a closing operation when the tripping impulse is connected in simultaneously via the auxiliary contact.
- **) For 2 cycle circuit-breakers.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PI	IYSICAL .	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE & PROTECTION	CHECKED DATE 2/11/98	APPROVED	0	SHEET	9	APP - 6.010.02.05

ATTACHMENT EMI 8-005-1

Listing of Test Instruments Used

_

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED	•	SHEET 10	APP - 6.010.02.05
Protection	DATE 2/11/98		U	SHEET TO	A11 - 0.010.02.00

REVISION HISTORY

Revision #	Comments
0	Procedure drafted by Kevin Lennon.
1	Revision by Jim Wojciak for minor and format changes, June 1991.

V / France North	DRAWN SIS	FILMED	REV	EM&P PH	IYSICAL .	APPARATUS PROCEDURES
Xcel Energy - North ELECTRIC MAINTENANCE & PROTECTION	CHECKED DATE 2/11/98	APPROVED	0	SHEET	11	APP - 6.010.02.05

Oil Circuit Breaker Detailed Inspection

1. Purpose

The purpose of this procedure is to provide instructions for the testing and maintenance of the Power Circuit Breakers for Mechanical and Electrical Integrity.

2. Definitions

- 2.1. <u>Testing and repairs</u> includes the following:
 - 2.1.1. Cleaning devices.
 - 2.1.2. Tightening and re-gasketing on manhole cover, bushing, etc.
 - 2.1.3. Replacement of failed parts with identical parts is allowable.
 - 2.1.4. Measuring and recording "as found" and "as left" conditions.

Note: Normal repairs do not include modifications of relays or control schemes.

- 2.2. "As Found" measurements are measurements made before any cleaning, adjusting, or repairing is done on a device.
- 2.3. "As Left" measurements are measurements made after cleaning, adjusting, and repairing have been completed on a device.
- 2.4. Bypass

Any device which blocks a component out of service or which prevents it from performing its intended function. Example: An electrical jumper or lifted wires.

3. Equipment Needed

3.1. Properly stocked maintenance vehicle.

4. References

- 4.1. Electrical
 - 4.1.1. Circuit Breaker Instruction Book.
 - 4.1.2. Single-line diagrams.
 - 4.1.3. Three-line diagrams.
- 4.2. Standards
 - 4.2.1. ANSI-C37.06-1997, AC High-Voltage Circuit Breakers.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
Protection	date 1/4/01		1	SHEET 1 of 6	APP - 6.010.03.01

5. Procedure

5.1. Precautions

- 5.1.1. Maintenance provider personnel shall take necessary precautions to prevent accidental contact with high voltage equipment as per the XCEL ENERGY Safety Manual.
- 5.1.2. Flammable solvents and cleaning fluids shall be kept in approved containers. The containers shall be labeled *FLAMMABLE* and shall have the type of material indicated on them per (MSDS).
- 5.1.3. All material must be on the approved list of XCEL ENERGY Hazardous Material procurement program.
- 5.1.4. Maintenance provider personnel shall take necessary precautions for the following:
 - 5.1.4.1. Shall take necessary precautions to properly ground equipment to discharge capacitive charges induced through service or testing.
 - 5.1.4.2.Shall take necessary precautions never to touch any leads, terminal, bushings, etc., with test equipment energized.
 - 5.1.4.3.Post "Danger High Voltage" signs as necessary and barricade appropriate areas on top of the circuit breaker and the ground for personnel protection.
 - 5.1.4.4.Covers or fittings shall not be opened unless zero gauge pressure exists inside the unit. Always relieve internal pressures slowly through valves.
- 5.1.5. Insulating oil must always be handled as flammable liquid. Closed circuit breaker tanks may, under some conditions, accumulate explosive gases, and oil handling procedures may generate static electricity. Proper grounding is imperative.
- 5.1.6. Refer to the manufacture's instruction manual for test requirements and as certain manufactures may recommend additional tests which may not be included in the procedure.
- 5.1.7. Write N/A on the Oil Circuit Breaker Detailed Inspection List for the tests not applicable to the circuit breaker being tested.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
Electric Maintenance &	CHECKED	APPROVED			
PROTECTION	DATE 1/4/01		1	SHEET 2 of 6	APP - 6.010.03.01

5.2. <u>Test</u>

docum	pen in completing all forms. Results of the following st tented on Oil Circuit Breaker Detailed Inspection List I f these instructions shall be initialed prior to starting the	Pages. Each
5.2.1.	If required, Verify Supervisor has authorized work to start.	7
5.2.2.	Tailgate (See tailgate check-off list).	
5.2.3.	Inspect the circuit breaker and accessories for external physical damage to paint finish, tanks, bushings and any indications of leaks. Record "as found" and "as left" condition in comment section on Oil Circuit Breaker Detailed Inspection List.	
5.2.4.	Check oil levels on Main Tank and Bushings. Record "as found" and "as left" oil levels in comment section on Oil Circuit Breaker Detailed Inspection List.	
5.2.5.	Inspect and ensure that the tank and frame are permanently and adequately grounded. Record "as found" and "as left" condition in comment section on Oil Circuit Breaker Detailed Inspection List.	
5.2.6.	Inspect compressor for oil leaks, vibration, check motor rotation and that connections are in good working order. Record "as found" and "as left" condition in comment section on Oil Circuit Breaker Detailed Inspection List.	
5.2.7.	Inspect Control Cabinet for moisture and condition of door gaskets. Check relay coils for excessive noise, discoloring, burning odor and charred wiring, check connections for tightness and check heaters. Record "as found" and "as left" condition in comment section on	

OIL CIRCUIT BREAKER DETAILED INSPECTION

Oil Circuit Breaker Detailed Inspection List.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
PROTECTION	DATE 1/4/01		1	SHEET 3 of 6	APP - 6.010.03.01

5.3.	Close-out
J.J.	CIODO OMI

5.3.1.	Complete the Oil Circuit Breaker Detailed Inspection List. Record all required information including "As Found" conditions that may have prevented proper operation of the circuit breaker.	
5.3.2.	Ensure all data forms are completed and attached.	i
533	Reviewed by System Engineer	

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
PROTECTION	DATE 1/4/01		1	SHEET 4 of 6	APP - 6.010.03.01

OIL CIRCUIT BREAKER DETAILED INSPECTION LIST (attach as many sheets as necessary)

	Substation Breaker #							
1)	1) Inform – Systems Operation, Trouble Foreman or Local Dispatch, that you are in the substation performing maintenance.							
2)	Visually inspect general condition of equipmen	t: Nee	ds					
	a) Bushings (oil levels, broken etc.) b) Main tank (oil levels) c) Oil Leaks d) Control Cabinet e) Grounding connections f) Is schematic in the control cabinet?	ition Attı	n. Remarks					
3)	Check fuses, heaters and thermostats.							
4)	Sample oil and test: a) Oil clarity b) Dielectric (should be >25kV)							
5)	Compressor (as applicable) a) Note hours of run-time b) Check belt, oil level, check valve, and pulleys c) Oil leaks							
6)	Mechanism a) Visually inspect general condition. b) Clean mechanism cabinet. c) Check fuses, heaters & thermostats. d) Pneumatic: Weather permitting: drain moisture from air tanks and check pressure switches. e) Hydraulic: Lower pressure, check pressure switches, and pre-charge.							
7)	Change oil in air compressor (Tag compressor with a tag showing oil type and date of change.)							

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
PROTECTION	DATE 1/4/01	<u> </u>	1	SHEET 5 of 6	APP - 6.010.03.01

Xcel Energy, Inc.	Page 6
Preventive Maintenance Plan	Tab 6
PSC 113.0607	
8) Check the safety relief valve for proper	
operation and tag showing date tested.	
Comments:	
<u>Comments.</u>	
Complete inspection sheets and return to o	office.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
Electric Maintenance &	CHECKED	APPROVED			
PROTECTION	DATE 1/4/01		1	SHEET 6 of 6	APP - 6.010.03.01

Voltage Regulator Detailed Inspection

1. Purpose

The purpose of this procedure is to provide instructions for the testing and maintenance of the Voltage Regulators for Mechanical and Electrical Integrity.

2. Definitions

- 2.1. **Testing and repairs** includes the following:
 - 2.1.1. Cleaning devices.
 - 2.1.2. Tightening and re-gasketing on manhole cover, bushing, etc.
 - 2.1.3. Replacement of failed parts with identical parts is allowable.
 - 2.1.4. Measuring and recording "as found" and "as left" conditions.

Note: Normal repairs do not include modifications of relays or control schemes.

- 2.2. <u>"As Found"</u> measurements are measurements made before any cleaning, adjusting, or repairing is done on a device.
- 2.3. "As Left" measurements are measurements made after cleaning, adjusting, and repairing have been completed on a device.
- 2.4. Bypass

Any device which blocks a component out of service or which prevents it from performing its intended function. Example: An electrical jumper or lifted wires.

3. Equipment Needed

3.1. Properly stocked maintenance vehicle.

4. References

- 4.1. Electrical
 - 4.1.1. Voltage Regulator Instruction Book.
- 4.2. Standards
 - 4.2.1. ANSI-C57.12.00-1993, General requirements for Liquid-Immersed Distribution, Power and Regulating Transformers.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL APPARATUS PROCEDURES	
Electric M aintenance $\&$	CHECKED	APPROVED			
PROTECTION	DATE 1/4/01		1	SHEET 1 of 5	APP - 6.018.01

5. <u>Procedure</u>

5.1. Precautions

- 5.1.1. Maintenance provider personnel shall take necessary precautions to prevent accidental contact with high voltage equipment as per the XCEL ENERGY Safety Manual.
- 5.1.2. Flammable solvents and cleaning fluids shall be kept in approved containers. The containers shall be labeled *FLAMMABLE* and shall have the type of material indicated on them per (MSDS).
- 5.1.3. All material must be on the approved list of XCEL ENERGY Hazardous Material procurement program.
- 5.1.4. Maintenance provider personnel shall take necessary precautions for the following:
 - 5.1.4.1. Shall take necessary precautions to properly ground equipment to discharge capacitive charges induced through service or testing.
 - 5.1.4.2.Shall take necessary precautions never to touch any leads, terminal, bushings, etc., with test equipment energized.
 - 5.1.4.3.Post "Danger High Voltage" signs as necessary and barricade appropriate areas on top of the voltage regulator and the ground for personnel protection.
 - 5.1.4.4.Covers or fittings shall not be opened unless zero gauge pressure exists inside the unit. Always relieve internal pressures slowly through valves.
- 5.1.5. Insulating oil must always be handled as flammable liquid. Voltage regulator tanks may, under some conditions, accumulate explosive gases, and oil handling procedures may generate static electricity. Proper grounding is imperative.
- 5.1.6. Refer to the manufacture's instruction manual for test requirements and as certain manufactures may recommend additional tests which may not be included in the procedure.
- 5.1.7. Write N/A on the Voltage Regulator Detailed Inspection List for the tests not applicable to the voltage regulator being tested.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
Protection	DATE 1/4/01		1	SHEET 2 of 5	APP - 6.018.01

5.2. <u>Test</u>

docum step of	pen in completing all forms. Results of the following stenented on Voltage Regulator Detailed Inspection List P these instructions shall be initialed prior to starting the If required, Verify Supervisor has authorized work to start.	ages. Each
5.2.2.	Tailgate (See tailgate check-off list).	·
5.2.3.	Inspect the voltage regulator and accessories for external physical damage to paint finish, tanks, radiators, bushings and any indications of leaks. Record "as found" and "as left" condition in comment section on Voltage Regulator Detailed Inspection List.	
5.2.4.	Check oil levels on Main Tank and Bushings. Record "as found" and "as left" oil levels in comment section on Voltage Regulator Detailed Inspection List.	
5.2.5.	Inspect and ensure that the tank and frame are permanently and adequately grounded. Record "as found" and "as left" condition in comment section on Voltage Regulator Detailed Inspection List.	
5.2.6.	Inspect fans for vibration and condition of blade. Ensure that fans motor are lubricated and that connections are in good working order. Record "as found" and "as left" condition in comment section on Transformer and LTC Detailed Inspection List.	
5.2.7.	Inspect Control Cabinet for moisture and condition of door gaskets. Check relay coils for excessive noise, discoloring, burning odor and charred wiring, check connections for tightness and check heaters. Record "as found" and "as left" condition in comment section on Voltage Regulator Detailed Inspection List.	
5.2.8.	If possible, run the tap changer up and down several taps and listen for unusual sounds, growling or grinding.	

Xcel Energy - I	V <i>orth</i> DI	RAWN SIS	FILMED	REV	EM&P PHYSICAL APPARATUS PROCEDURES	
ELECTRIC MAINTE	NANCE &	HECKED	APPROVED			
PROTECTIO	N D	ATE 1/4/01		1	SHEET 3 of 5	APP - 6.018.01

5.3.	<u>Close-</u> 5.3.1.	Complete the Voltage Regulator Detailed Inspection List. Record all required information including "As Found" conditions that may have prevented proper operation of the voltage regulator.	
	5.3.2.	Ensure all data forms are completed and attached.	
	5.3.3.	Reviewed by System Engineer.	•

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL APPARATUS PROCEDURES		
ELECTRIC MAINTENANCE &	CHECKED	APPROVED				
PROTECTION	DATE 1/4/01		1	SHEET 4 of 5	APP - 6.018.01	

VOLTAGE REGULATOR DETAILED INSPECTION LIST

(attach as many sheets as necessary)

	Subs	tation Regulator # _		
.)	Inform – Systems Operation, 7 the substation performing main	Frouble Forei itenance.	man or Local	Dispatch, that you are in
()	Visually inspect general condition		t: <u>Needs Attn</u> .	Remarks
	a) Bushingsb) Oil Levelsc) Oil Leaksd) Control Cabinete) Grounding connections			
3)	Check fuses, heaters and thermostats.			
ł)	Sample oil and test: a) Oil clarity b) Dielectric (should be >25kV)			
5)	Tap Changer:a) Note number of operationsb) Note operating range:	from to		
	 c) Currently on tap: d) Has the tap changer operated through neutral? e) Is the counter working? f) Oil Level (high, low, OK) g) Automatic operation 			
<u> </u>	omments:			
_	Complete insp	pection sheets	and return to	office.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL APPARATUS PROCEDURES	
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
${f P}$ ROTECTION	DATE 1/4/01		1	SHEET 5 of 5	APP - 6.018.01

LTC Inspection

1. Purpose

The purpose of this procedure is to provide instructions for the testing and maintenance of Load Tap Changers (LTC's.)

2. Definitions

- 2.1. Load Tap Changer (LTC) and On-Load Tap Changer (OLTC) and synonymous terms.
- 2.2. Normal Repairs include the following:
 - 2.2.1. Cleaning devices.
 - 2.2.2. Tightening fasteners such as screws and nuts.
 - 2.2.3. Replacement of failed parts with identical parts is allowable.

NOTE: Normal repairs do not include modifications of relays or control schemes.

- 2.3. "As Found" measurements are measurements made before any cleaning, adjusting, or repairing is done on a device.
- 2.4. "As Left" measurements are measurements made after cleaning, adjusting, and repairing have been completed on a device.

2.5. Maintenance Provider Technician

That individual, trained and qualified in accordance with appropriate EM Testing Instructions and procedures, who has been designated by the EM Supervisor as having the responsibility for the correct performance of the work required by this procedure.

3. Equipment Needed

The following items are commonly required for this work. Each job may have specific requirements in addition to this general check list.

- 3.1. "Danger High Voltage" signs and barricades
- 3.2. Portable grounds (stored in substation control house)
- 3.3. Oil storage tank(s)
- 3.4. Maintenance Truck
- 3.5. JLG and/or scaffolding
- 3.6. Portable generator
- 3.7. Hypotronics Oil Dielectric test set with D-1816 or D-877 test cup
- 3.8. Programma Hi-Pot for vacuum LTC's

LTC Inspection

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED A. Jandro	APPROVED			
PROTECTION	DATE 9/17/98		1	SHEET 1 of 6	APP - 6.017.07

3.9. For suspect LTC switches, spare parts (e.g. contacts, reversing switch) should be on hand before beginning the inspection.

LTC switches currently on the suspect list due to high frequency of problems include:

- Westinghouse UTT and UTT-A
- McGraw Edison 550C
- General Electric LRT-72 and LRT-200

4. References

- 4.1. Transformer schematic (should be in control cabinet)
- 4.2. Manufacturers Instruction Manual.

5. Procedure

5.1. Precautions

- 5.1.1. Verify Operator has isolated the transformer and has authorized work to start.
- 5.1.2. Maintenance provider personnel shall take necessary precautions to prevent accidental contact with high voltage equipment as per the XCEL ENERGY Safety Manual.
- 5.1.3. Flammable solvents and cleaning fluids shall be kept in approved containers. The containers shall be labeled *FLAMMABLE* and shall have the type of material indicated on them per (MSDS.)
- 5.1.4. All material must be on the approved list of XCEL ENERGY Hazardous Material procurement program.
- 5.1.5. Maintenance provider personnel shall take necessary precautions for the following:
 - 1. Shall take necessary precautions to properly ground equipment to discharge capacitive charges induced through service or testing.
 - 2. Shall take necessary precautions never to touch any leads, terminals, bushings, etc., with test equipment energized. A transformer with a high turn to turn ratio transforms very small input voltages into dangerously high output voltages.
 - 3. Post "Danger High Voltage" signs as necessary and barricade appropriate areas on top of the transformer and the ground for personnel protection.

LTC INSPECTION

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED A. Jandro	APPROVED			
PROTECTION	DATE 9/17/98		1	SHEET 2 of 6	APP - 6.017.07

- 5.1.6. The dielectric strength of oil is affected by the most minute traces of certain impurities, particularly water. It is important that the greatest care be taken in obtaining the samples and in handling them to avoid contamination.
- 5.1.7. Transformer oil must always be handled as flammable liquid. Closed transformer and load tap changer tanks may, under some conditions, accumulate explosive gases, and oil handling procedures may generate static electricity. Proper grounding is imperative.
- 5.1.8. Refer to the manufacture's instruction manual for test requirements, manufactures may recommend additional tests which may not be included in the procedure.
- 5.1.9. Write N/A on the transformer Test Report for the tests not applicable to the transformer being tested.

5.2. Instructions

NOTE: Use pen in completing all forms. Results of the following steps shall be documented on Maintenance and Test Report Pages or on this form where indicated. Each step of these instructions shall be initialed prior to starting the next step.

5.2.1.	Tailgate (See Tailgate Check-Off List).	
5.2.2.	Collect a DGA oil sample from the main tank (this can and should be done the day before the inspection so results are available.)	
5.2.3.	Check isolation, post necessary "Danger High Voltage" signs, and ensure that the top of transformer is barricade appropriately. On existing transformers , test for dead and place personal grounds on transformer and associated equipment.	
5.2.4.	Open all control switches and fuses.	
5.2.5.	Record the following as-found information: 1. Running tap: 2. LTC Position drag hands: HI: LO:	
5.2.6.	Remove vent plug or open valve from top of transformer LTC compartment and drain oil. (This includes filtering.)	

LTC INSPECTION

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED A. Jandro	APPROVED			
PROTECTION	DATE 9/17/98		1	SHEET 3 of 6	APP - 6.017.07

Note: It is not necessary to circulate the oil at this time.						
5.2.7.	Open and ventilate compartment.					
5.2.8.	Clean carbon from LTC compartment and check bottom of compartment for broken or missing parts.					
5.2.9.	Visually inspect for abnormal conditions such as badly burnt contacts, damaged or loose parts, tracking on boards, leaks from main tank, cracked or leaking board or bushing seals, etc. 1. If any contacts appear to be burnt open, notify engineering immediately as this may indicate additional main transformer problems. Do not correct this condition until reviewed by engineering. 2. Document all as-found conditions on the maintenance report.					
5.2.10.	 Make any necessary repairs as per Manufactures instruction book. Immediately notify the supervisor or engineering if any component needs to be replaced or if unusual conditions are discovered. Take photos to document conditions. List all replaced or repaired parts on the maintenance report. Be specific about as-found condition and location (e.g. which tap, moving or stationary.) Return all removed parts to engineering for further evaluation. 					
5.2.11	Operate LTC manually and check contact alignment on each poistion, bridging, spring compression, and mechanical stops. If equipment with vacuum bottles, high pot as per manufactures I.B.					
5.2.12	. Electrically operate when possible.					
5.2.13	. Check limit switches.					
5.2.14	. Check reversing switches.					
5.2.15	. Verify all tools, rags, equipment have been removed from compartment.					
5.2.16	. Check and reseal door gasket, close door. LTC INSPECTION					

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED A. Jandro	APPROVED			
PROTECTION	DATE 9/17/98		1	SHEET 4 of 6	APP - 6.017.07

5.3.

5.2.17.	 Check oil before refilling the LTC and process if necessary Use the ANSI D-877 dielectric test for new oil or in free-breathing LTC's. Use the ANSI D-1816 dielectric test for sealed units. 	
5.2.18.	Filter oil into LTC compartment. (Check Manufactures I.B. to see if LTC needs to have the oil OPU processed.)	
5.2.19.	Reinstall vent plug.	
	Test oil. eathing type LTC's (common) no additional testing is required.	
For no	n-breathing LTC's (e.g. vacuum) collect oil samples for: 1. Karl Fisher 2. Insulating Oil 3. Dissolved Gas Analysis (DGA)	
5.2.21.	Inspect operating mechanism:	
5.2.22.	Clean and lubricate as per manufactures I.B.	
5.2.23.	Check fuses, heaters and thermostats.	
5.2.24.	Close all control switches and fuses.	
5.2.25.	Electrically operate through all LTC tap positions and verify limit switches work properly.	
Close-	<u>out</u>	
5.3.1.	Remove grounds.	
5.3.2.	Complete the Maintenance and Test Report. Record all required information including "As Found" conditions that may have prevented proper operation of the transformer.	
5.3.3.	Insure all data forms are completed and attached.	
5.3.4.	Reviewed by Engineer.	

LTC Inspection

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED A. Jandro	APPROVED			
Protection	DATE 9/17/98		1	SHEET 5 of 6	APP - 6.017.07

MAINTENANCE AND TEST REPORT

				DATE	
All initials	shall be identified below:				
		LLA	T:41.		
<u>Initial</u>	Name (Print or write legi	•	<u>Title</u>	_	í
				_	
RIAL # MEPLATE DA	TA				
	R	MODEL/STV	VI F		
OLTAGE		AMPS		-	
ALLONS OF OI	L (LTC)	Is a filtration	pump installed	on this LTC? _	(Y/N)
	OUND CONDITIONS:				
OIL CONDITIO	Nicles found in the oil?	(V/NI)			
were metat parti Describe or ident	tify possible source:	_(1/N)			
CONTACTS: Describe wear.	Were some contacts more we	orn than others? V	Vhich ones?		
ODK DONE (D	WDI AINI IN DETAIL)				
ORK DONE (E.	XPLAIN IN DETAIL)				
 ·	,				
4.1					
					nd M ^P (PV)
······································		 			

LTC INSPECTION

1 2200 69 2.0.0.0	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED A. Jandro	APPROVED			
PROTECTION	DATE 9/17/98		1	SHEET 6 of 6	APP - 6.017.07

Gas Circuit Breaker Detailed Inspection

1. Purpose

The purpose of this procedure is to provide instructions for the testing and maintenance of the Power Circuit Breakers for Mechanical and Electrical Integrity.

2. Definitions

- 2.1. <u>Testing and repairs</u> includes the following:
 - 2.1.1. Cleaning devices.
 - 2.1.2. Tightening and re-gasketing on manhole cover, bushing, etc.
 - 2.1.3. Replacement of failed parts with identical parts is allowable.
 - 2.1.4. Measuring and recording "as found" and "as left" conditions.

Note: Normal repairs do not include modifications of relays or control schemes.

- 2.2. "As Found" measurements are measurements made before any cleaning, adjusting, or repairing is done on a device.
- 2.3. "As Left" measurements are measurements made after cleaning, adjusting, and repairing have been completed on a device.

2.4. **Bypass**

Any device which blocks a component out of service or which prevents it from performing its intended function. Example: An electrical jumper or lifted wires.

3. Equipment Needed

3.1. Properly stocked maintenance vehicle.

4. References

- 4.1. Electrical
 - 4.1.1. Circuit Breaker Instruction Book.
 - 4.1.2. Single-line diagrams.
 - 4.1.3. Three-line diagrams.

4.2. Standards

4.2.1. ANSI-C37.06-1997, AC High-Voltage Circuit Breakers.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
Protection	DATE 1/4/01		1	SHEET 1 of 5	APP - 6.010.02.015

5. Procedure

5.1. Precautions

- 5.1.1. Maintenance provider personnel shall take necessary precautions to prevent accidental contact with high voltage equipment as per the XCEL ENERGY Safety Manual.
- 5.1.2. Flammable solvents and cleaning fluids shall be kept in approved containers. The containers shall be labeled *FLAMMABLE* and shall have the type of material indicated on them per (MSDS).
- 5.1.3. All material must be on the approved list of XCEL ENERGY Hazardous Material procurement program.
- 5.1.4. Maintenance provider personnel shall take necessary precautions for the following:
 - 5.1.4.1.Shall take necessary precautions to properly ground equipment to discharge capacitive charges induced through service or testing.
 - 5.1.4.2.Shall take necessary precautions never to touch any leads, terminal, bushings, etc., with test equipment energized.
 - 5.1.4.3.Post "Danger High Voltage" signs as necessary and barricade appropriate areas on top of the circuit breaker and the ground for personnel protection.
 - 5.1.4.4.Covers or fittings shall not be opened unless zero gauge pressure exists inside the unit. Always relieve internal pressures slowly through valves.
- 5.1.5. Closed circuit breaker tanks may, under some conditions, accumulate explosive gases, and procedures may generate static electricity. Proper grounding is imperative.
- 5.1.6. Refer to the manufacture's instruction manual for test requirements and as certain manufactures may recommend additional tests which may not be included in the procedure.
- 5.1.7. Write N/A on the Gas Circuit Breaker Detailed Inspection List for the tests not applicable to the circuit breaker being tested.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
PROTECTION	DATE 1/4/01		1	SHEET 2 of 5	APP - 6.010.02.015

5.2. <u>Test</u>

docum	pen in completing all forms. Results of the following stone tented on Gas Circuit Breaker Detailed Inspection is step of these instructions shall be initialed prior to starti	List Pages.
5.2.1.	If required, Verify Supervisor has authorized work to start.	
5.2.2.	Tailgate (See tailgate check-off list).	
5.2.3.	Inspect the circuit breaker and accessories for external physical damage to paint finish, tanks, bushings and any indications of leaks. Record "as found" and "as left" condition in comment section on Gas Circuit Breaker Detailed Inspection List.	
5.2.4.	Check gas pressures on Tank and Bushings. Record "as found" and "as left" oil levels in comment section on Gas Circuit Breaker Detailed Inspection List.	
5.2.5.	Inspect and ensure that the tank and frame are permanently and adequately grounded. Record "as found" and "as left" condition in comment section on Gas Circuit Breaker Detailed Inspection List.	
5.2.6.	Inspect compressor for oil leaks, vibration, check motor rotation and that connections are in good working order. Record "as found" and "as left" condition in comment section on Gas Circuit Breaker Detailed Inspection List.	
5.2.7.	Inspect Control Cabinet for moisture and condition of door gaskets. Check relay coils for excessive noise, discoloring, burning odor and charred wiring, check connections for tightness and check heaters. Record "as found" and "as left" condition in comment section on Gas Circuit Breaker Detailed Inspection List.	رده خد

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
Electric Maintenance &	CHECKED	APPROVED			
PROTECTION	DATE 1/4/01		1	SHEET 3 of 5	APP - 6.010.02.015

5.3. Close-	out
--------------------	-----

5.3.1.	Complete the Gas Circuit Breaker Detailed Inspection List. Record all required information including "As Found" conditions that may have prevented proper operation of the circuit breaker.	
5.3.2.	Ensure all data forms are completed and attached.	•
5.3.3.	Reviewed by System Engineer.	

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
Protection	DATE 1/4/01		1	SHEET 4 of 5	APP - 6.010.02.015

GAS CIRCUIT BREAKER DETAILED INSPECTION LIST

(attach as many sheets as necessary)

	Substation Breaker #
1)	Inform – Systems Operation, Trouble Foreman or Local Dispatch, that you are in the substation performing maintenance.
2)	Visually inspect general condition of equipment: Needs ConditionAttn. Remarks
	a) Bushings (oil levels, broken etc.) b) Main tank c) Gas pressure (s) d) Control Cabinet e) Grounding connections f) Is the BKR schematic in the control cabinet? g) Note any conditions requiring an outage to repair.
3)	Check fuses, heaters and thermostats.
4)	Compressor (as applicable) a) Note hours of run-time b) Check belt, oil level, check valve, and pulleys c) Oil leaks
5)	Mechanism a) Visually inspect general condition. b) Clean mechanism cabinet. c) Check fuses, heaters & thermostats. d) Pneumatic: Weather permitting: drain moisture from air tanks and check pressure switches. e) Hydraulic: Lower pressure, check pressure switches, and pre-charge.
6)	Change oil in air compressor (Tag compressor with a tag showing oil type and date of change.)
<u>Cc</u>	omments:
_	Complete inspection sheets and return to office.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
PROTECTION	DATE 1/4/01		1	SHEET 5 of 5	APP - 6.010.02.015

Substation Relay Inspections

Substation	

1. Purpose

This procedure is for the routine relay inspection of XCEL ENERGY substations.

2. <u>Definitions</u>

- 2.1. **Inspection** includes the following:
 - 2.1.1. Cleaning devices.
 - 2.1.2. Testing as required.
 - 2.1.3. Repairing or Correcting sub-standard conditions where possible.
 - 2.1.4. Noting "as-left" conditions that require further attention.
 - 2.1.5. Recording "as found" and "as left" conditions.
- 2.2. <u>As-Found"</u> measurements are measurements made before any cleaning, adjusting, or repairing is done on a device.
- 2.3. "As-Left" measurements are measurements made after cleaning, adjusting, and repairing have been completed on a device.

2.4. Maintenance Provider Technician

That individual, trained and qualified in accordance with appropriate testing instructions and procedures, who has been designated by the Supervisor as having the responsibility for the correct performance of the work required by this procedure.

3. Equipment Needed

- 3.1. A properly stocked Maintenance vehicle
- 3.2. Inspection Forms
- 3.3. Digital multimeter
- 3.4. Hold tags
- 3.5. Various fuses for replacement

4. References

4.1. None

5. Procedure

5.1. Precautions

5.1.1. Maintenance provider personnel shall take necessary precautions to prevent accidental contact with high voltage equipment as per the XCEL ENERGY Safety Manual.

Substation Relay Inspections

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P RELAY PROCEDURES		AY PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED SJB	APPROVED				
PROTECTION	DATE 3/3/99		0_	SHEET	1 of 4	RLY - 2.01.02

• Check bulbs

	5.1.2.	Contact System Operator or Regional Dispatcher prior to inspection and inform them that you are in the substation performing maintenance.	
5.2.	Instru	<u>ictions</u>	
shall	be doc	pen in completing all forms. Results of the following steps umented on Inspection Report Pages. Each step of these shall be initialed when complete.	
Chec	k, Corr	ect and/or document any irregularities found.	
	5.2.1.	 Inspect potential device secondary fuses Test for continuity Check physical condition Replace when necessary 	
	5.2.2.	 Inspect all panels for correct switch positions Check 43, 97, trip, current, potential, and test switches If a switch is to be left in a state other than normal, ensure it is properly tagged 	
	5.2.3.	Inspect station aux transfer switch nspect internal relays and contacts heck normal and emergency source voltage est transfer and return to normal operation	I C T
Test mai		Inspect station annuciators mote annuciators for supply power and test lights	
	5.2.5.	Test battery systems for grounds	
	5.2.6.	Test load side of all DC fuses for proper voltage	
	5.2.7	. Test load side of all AC fuses for proper voltage	

Substation Relay Inspections

5.2.8. Inspect for proper indication lights

• Inventory bulb and lens styles for LED upgrade (in station and in outdoor equipment if necessary.)

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P REI	AY PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED SJB	APPROVED			
Protection	DATE 3/3/99		0	SHEET 2 of 4	RLY - 2.01.02

		Date:	
Completed by:	:	Date:	
	5.3.3.	Reviewed by Engineer.	
	5.3.2.	Insure all data forms are completed and attached.	
5.3.	<u>Close-</u> 5.3.1.	Complete all Inspection Forms. Record all required information including work done and "As Found" conditions that may have prevented proper operation of the equipment.	
	5.2.17.	Verify emergency phone number is displayed and that station location emergency directions are shown.	
	5.2.16.	. Complete Telephone Cabinet Inspection checklist	
	5.2.15.	Check telephone loopback devices are passive devices or are supplied from station battery	
	5.2.14.	Check panel meters for balanced loading indication.	
	5.2.13.	Check with EMS technician to ensure station metering indicates proper load flows and power-in equals power-out.	
	5.2.12.	Check station one-line diagram is the most current issues.	
	5.2.11.	Inspect panels, junction boxes, safety switches, wave traps, tuning devices for rodent nests, moisture, or overheating, etc.	
	5.2.10.	Inspect gauges (visual) Look for expected reading Cracked or broken glass Moisture	
	5.2.9.	Check all panel and terminal cabinet terminals for tightness (where possible and if reasonable) – this test should be performed by feeling the conductors for tightness at the termination.	

Substation Relay Inspections

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P REI	AY PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED SJB	APPROVED	Ī		
PROTECTION	DATE 3/3/99		0	SHEET 3 of 4	RLY - 2.01.02

TELEPHONE CABINET INSPECTION SHEET (attach as many sheets as necessary)

		Substation	
ок	NEEDS ATTN.		REMARKS
		Cabinet is clean & accessible.	
		Unprotected (Phone Co.) wiring is kept away from station ground	
		Gas tubes are NOT connected on the unprotected (Phone Co.) wiring. (Remove gas tubes if they exists on the Phone Co. wiring.)	
		Separation is maintained between protected and unprotected wiring (If NO – please draw a sketch on back of form.)	
		Schematic of telephone cabinet is up-to-date (If NO – please RED & GREEN print and return to EM&P)	
		Telephone protection is NOT bypassed or missing	
		Number of Hi-Guards in cabinet Number powered with DC-DC Number powered with R-Zener	
		Number of Isolation transformers in cabinet	
		Number of Positron modules	
		Number of Lyte Lynx modules	
		Number of loopback modules	and the
		All Loopbacks are powered from a DC-DC converter (If NO – note power source, # of	
Com	pleted by:	modules powered & circuits)	
Colli	pieted by: _	Complete inspection sheets and return to office.	

Substation Relay Inspections

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P RELAY PROCEDURES	
ELECTRIC MAINTENANCE &	CHECKED SJB	APPROVED			
PROTECTION	DATE 3/3/99		0	SHEET 4 of 4	RLY - 2.01.02

Doble Protest Testing

1. Purpose

This procedure describes the general steps for running the Doble Protest automated testing equipment.

2. Definitions

- 2.1.
- 2.2.

3. Equipment Needed

3.1. Test Equipment

3.1.1. Doble Test Set - containing three (3) phase Voltage and one(1) high Current units at minimum.

3.2. Software

3.2.1. Doble Protest program. (e.g. Relay System Test Plan for the Solid State Distance Scheme)

4. References

- 4.1. Doble Protest Instruction book
- 4.2. XCEL ENERGY Control Standard Book

5. <u>Procedure</u>

5.1. Getting Started

SOFTWARE USAGE FOR RELAY TESTING: (The following is a sample for explanation purposes only and, hence, will not be identical to those that you may actually see.)

5.1.1.	After turning	ON the	laptop,	choose	PROTEST3	in	the
	startup menu ar	nd press	ENTER	t.			

5.1.2.	After the C:\ prompt, type: "PT3" and press ENTER. This
	will take you into the ProTest software.

- 5.1.3. Enter your name in the Username Field. Click on PROTEST. [see fig.1].
- 5.1.4. Select the **Location Name** (i.e. substation), by using arrow keys: \uparrow and \downarrow . (\downarrow key also allows you to enter a new field in

Doble Protest Testing

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P RE	LAY PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MNS	APPROVED			
PROTECTION	DATE 2/15/99		0	SHEET 1 of 12	RLY - 4.03.01.01

any level	of this programif it does not, press F3	, then ↓
and enter	the new field.) [see fig. 2].	

- 5.1.5. Press Fl. This will take you into the TERMINAL ID level of the program [see fig.3]. Select the line name Primary or Secondary relaying. (Note: Fl will always take you forward one level into the program and F10 will always take you backward one level out of the program).
- 5.1.6. *Press* FI to go forward into the RELAY ID program level (see fig.4). *Highlight the* relay of interest and verify the information contained within.
- 5.1.7. Press FI to move forward into the RELAY TEST PLAN program level [see fig.5]. This level will list a number of tests involved with the particular relay that you have chosen. Each test plan is defined by a 'macro'. Press F4 in order to acquire a "pop-up window" list offering on Help Topics [see fig.6]. Use the down arrow key [↓] to choose MACRO in the listing. Then press ENTER

 to give you a listing of all macros and their function* [see fig.7]. Use Down Arrow Key [↓] or "Pg Dn Key" to select a particular "Macro" (i.e.: SSIMUL). Press "ENTER" [↓].
- 5.1.8. Pressing FI while viewing "AVAILABLE Protest III Macros" (Fig. 7) will give a graphical representation of any selected test macro and the test values it will require. (see fig.8)

Note: There is no graphics help for SSIMUL MACRO.

5.1.9. After selecting the particular "MACRO" you will return to a screen as seen in Fig. 5.

SPECIAL INFORMATION:

Pressing ALT & FI at the "Test Plan Level" (Fig. 5) will start the Auto Testing Process (see fig.9): this will execute the tests until a NOTEBK macro (see fig. 5 under "MACRO" column: "NOTEBK") is encountered. Then, for example, if the NOTEBK note would direct the technician to change leads, he/she would do so; then hit ENTER \(\precedut \) to resume the auto-testing process (fig. 10).

Doble Protest Testing

Xcel Energy - North	drawn SIS	FILMED	REV	EM&P RE	LAY PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MNS	APPROVED			
Protection	DATE 2/15/99		0	SHEET 2 of 12	RLY - 4.03.01.01

5.:	2.	Run	ning	Test
J.,	۷.	TIMIT		1000

- 5.2.1. Pressing Fl at this point will take you into a specific test.
 - For Non-SSIMUL MACRO test this specific test level will appear like fig. 11.
 - For SSIMUL MACRO test the screen will appear like fig. 12

Fig. 11 (BSRHOI MACRO) shows:

- 1. 'Doble Source assignments',
- 2. their connection to the relay terminal # 's,
- 3. their values and ACTION conditions of the macro.
- These factors will affect and determine the individual relay element testing. 'Sense Connections' are also shown. MA represents the 'Master' source. [Note: The 'Action' source as defined by the Test Plan values must be made the 'Master' source].
- The TAB key may be used to take you into the left-half or the right-half of the computer screen.
- 5.2.2. Pressing Fl for Non-SSIMUL MACRO Test will RUN the Macro Test for you. [Test data of the RUN will be stored under the F5 key. Pressing this key will allow you to view the test results. The F6 key can be used to PLOT the test data].

Fig. 12 (SSIMUL MACRO) shows the timer results from SSIMUL MACRO TEST.

- 5.2.3. *Pressing* F1 for SSIMUL MACRO will take you to its Test Screen (Fig. 13). Fig. 13 shows various states of testing the relaying system.
- 5.2.4. Pressing F1 again will run the MACRO Test for you.

Doble Protest Testing

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P R	ELAY PROCEDURES
	CHECKED MNS	APPROVED			
PROTECTION	DATE 2/15/99		0	SHEET 3 of 12	RLY - 4.03.01.01

Appendix

Query	Reports	ProTesT	System	Convert	Exit	
+						- T
! !						:
! !			1992, 1993, 1	994		:
!			by			į
}			eering Company			
1		All Righ	ts Reserved			į
1 1 1		Installed Pl	ans: Z I V	F VIDC	,	:
1		+	+			!
!		User:	1			-
!		+	+			- 1
!						
F2000 Pro	TesT III 1.54			Bui	ld: 02/07/97	1
+						-+

Fig. 1

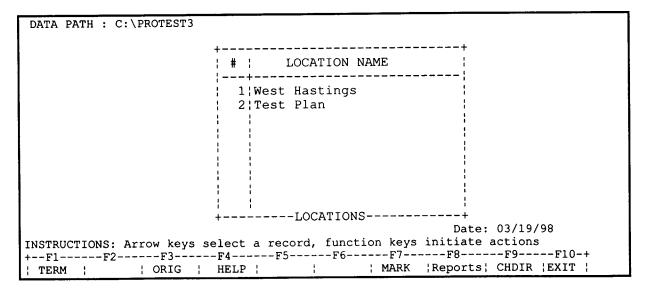


Fig. 2

XCEL ENERGY COMPANY	DRAWN SIS	FILMED	REV	EM&P REI	AY PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MNS	APPROVED			
PROTECTION	DATE 2/15/99		0	SHEET 4 of 12	RLY - 4.03.01.01

Fig. 3

. ,	RELAY ID	• • • • •		SERIAL #	DATE	ORG !
•		+ SEL	MULTI	¦1	03/19/98	LG
- 1		; ;		1	1	1
1					1	
1				1		
-						
- {				1	ì	i i
			DIRECTORY OF RELA		e: 03/19/98	+

Fig.4

XCEL ENERGY COMPANY	DRAWN SIS	FILMED	REV		EM&P REI	LAY PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MNS	APPROVED				
PROTECTION	DATE 2/15/99		0	SHEET	5 of 12	RLY - 4.03.01.01

# ! TEST NAME	MACRO PRT TE	ST;LOCK; COMMENTS	·+ :
	SSIMUL NO NOTEBK NO	NO A-B REACH TEST NO SELECTOR SWITCH TO A-GF	RD POSITION
		COM DIAM	

Fig. 5

Fig. 6

	DRAWN SIS	FILMED	REV	EM&P RE	LAY PROCEDURES
Electric M aintenance &	CHECKED MNS	APPROVED			
Protection	DATE 2/15/99		0	SHEET 6 of 12	RLY - 4.03.01.01

RCHBOI Reach Binary Search, Current. Fast Search plus Ramp. RCHBOV Reach Binary Search, Voltage. Fast Search plus Ramp. RCHLRI Reach Linear Ramp Current, from Offset to Pickup RCHLRI Reach Linear Ramp Current; Return to Offset between Pulses RCHPRI Reach Pulsed Ramp Current; Return to Offset between Pulses RCHPRV Reach Pulsed Ramp Voltage; Return to Offset between Pulses RCHPRV Reach Pulsed Ramp Voltage; Return to Offset between Pulses SSIMUL Run STATE SIMULATOR II from within ProTest III TFRPLT Frequency vs. Time Characteristic; 12 Points with Pass/Fail TIMEF Operate Time for Frequency Shift TIMEF Operate Time for Step Change in Current TIMEPH Operate Time for Step Change in Voltage TOCPLT Current vs. Time Characteristic; 12 Points with Pass/Fail TOVPLT Voltage vs. Time Characteristic; 12 Points with Pass/Fail TPHPLT Phase Shift vs. Time Characteristic; 12 Points with Pass/Fail ZPLBOI Z Plot Binary Search, Current; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLLRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLLRI Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPLBOV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Bina	
RCHBOV Reach Binary Search, Voltage. Fast Search plus Ramp. RCHLRI Reach Linear Ramp Current, from Offset to Pickup RCHLRV Reach Linear Ramp Voltage, from Offset to Pickup RCHPRI Reach Pulsed Ramp Current; Return to Offset between Pulses RCHPRV Reach Pulsed Ramp Voltage; Return to Offset between Pulses RCHPRV Reach Pulsed Ramp Voltage; Return to Offset between Pulses RCHPRV Reach Pulsed Ramp Voltage; Return to Offset between Pulses RCHPRV Reach Pulsed Ramp Voltage; Return to Offset between Pulses RCHPRV Reach Pulsed Ramp Voltage; Il Points with Pass/Fail TFRPLT Frequency vs. Time Characteristic; 12 Points with Pass/Fail TIMEF Operate Time for Step Change in Current TIMEPH Operate Time for Step Change in Voltage TOCPLT Current vs. Time Characteristic; 12 Points with Pass/Fail TOVPLT Voltage vs. Time Characteristic; 12 Points with Pass/Fail TPHPLT Phase Shift vs. Time Characteristic; 12 Points with Pass/Fail TPHPLT Phase Shift vs. Time Characteristic; 12 Points with Pass/Fail ZPLBOI Z Plot Binary Search, Current; up to 100 Impedance Points ZPLLRV Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRV Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Current; 12 Points with Pass/Fail	
RCHLRI Reach Linear Ramp Current, from Offset to Pickup RCHLRV Reach Linear Ramp Voltage, from Offset to Pickup RCHPRI Reach Pulsed Ramp Current; Return to Offset between Pulses RCHPRV Reach Pulsed Ramp Voltage; Return to Offset between Pulses RCHPRV Reach Pulsed Ramp Voltage; Return to Offset between Pulses SSIMUL Run STATE SIMULATOR II from within ProTesT III TFRPLT Frequency vs. Time Characteristic; 12 Points with Pass/Fail TIMEF Operate Time for Frequency Shift TIMEI Operate Time for Step Change in Current TIMEPH Operate Time for Step Change in Voltage TOCPLT Current vs. Time Characteristic; 12 Points with Pass/Fail TOVPLT Voltage vs. Time Characteristic; 12 Points with Pass/Fail TPHPLT Phase Shift vs. Time Characteristic; 12 Points with Pass/Fail ZPLBOI Z Plot Binary Search, Current; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Voltage; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary	RCHBOI : Reach Binary Search, Current. Fast Search plus Ramp.
RCHLRV Reach Linear Ramp Voltage, from Offset to Pickup RCHPRI Reach Pulsed Ramp Current; Return to Offset between Pulses RCHPRV Reach Pulsed Ramp Voltage; Return to Offset between Pulses SSIMUL Run STATE SIMULATOR II from within ProTesT III TFRPLT Frequency vs. Time Characteristic; 12 Points with Pass/Fail TIMEF Operate Time for Frequency Shift TIMEI Operate Time for Step Change in Current TIMEPH Operate Time for Step Change in Phase TIMEV Operate Time for Step Change in Voltage TOCPLT Current vs. Time Characteristic; 12 Points with Pass/Fail TOVPLT Voltage vs. Time Characteristic; 12 Points with Pass/Fail TPHPLT Phase Shift vs. Time Characteristic; 12 Points with Pass/Fail ZPLBOI Z Plot Binary Search, Current; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Voltage; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPLPRV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltag	RCHBOV : Reach Binary Search, Voltage. Fast Search plus Ramp.
RCHPRI Reach Pulsed Ramp Current; Return to Offset between Pulses RCHPRV Reach Pulsed Ramp Voltage; Return to Offset between Pulses SSIMUL Run STATE SIMULATOR II from within ProTesT III TFRPLT Frequency vs. Time Characteristic; 12 Points with Pass/Fail TIMEF Operate Time for Frequency Shift TIMEI Operate Time for Step Change in Current TIMEPH Operate Time for Step Change in Phase TIMEV Operate Time for Step Change in Voltage TOCPLT Current vs. Time Characteristic; 12 Points with Pass/Fail TOVPLT Voltage vs. Time Characteristic; 12 Points with Pass/Fail TPHPLT Phase Shift vs. Time Characteristic; 12 Points with Pass/Fail ZPLBOI Z Plot Binary Search, Current; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Voltage; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPLPRV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOI Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search,	
RCHPRV Reach Pulsed Ramp Voltage; Return to Offset between Pulses SSIMUL Run STATE SIMULATOR II from within ProTesT III TFRPLT Frequency vs. Time Characteristic; 12 Points with Pass/Fail TIMEF Operate Time for Frequency Shift TIMEI Operate Time for Step Change in Current TIMEPH Operate Time for Step Change in Phase TIMEV Operate Time for Step Change in Voltage TOCPLT Current vs. Time Characteristic; 12 Points with Pass/Fail TOVPLT Voltage vs. Time Characteristic; 12 Points with Pass/Fail TPHPLT Phase Shift vs. Time Characteristic; 12 Points with Pass/Fail ZPLBOI Z Plot Binary Search, Current; up to 100 Impedance Points ZPLLRV Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLPRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPLPRV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOI Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	
SSIMUL Run STATE SIMULATOR II from within ProTesT III TFRPLT Frequency vs. Time Characteristic; 12 Points with Pass/Fail TIMEF Operate Time for Frequency Shift	RCHPRI : Reach Pulsed Ramp Current; Return to Offset between Pulses
TFRPLT Frequency vs. Time Characteristic; 12 Points with Pass/Fail TIMEF Operate Time for Frequency Shift Current Operate Time for Step Change in Current TIMEPH Operate Time for Step Change in Phase Current Operate Time for Step Change in Voltage TOCPLT Current vs. Time Characteristic; 12 Points with Pass/Fail TOVPLT Voltage vs. Time Characteristic; 12 Points with Pass/Fail TPHPLT Phase Shift vs. Time Characteristic; 12 Points with Pass/Fail ZPLBOI Z Plot Binary Search, Current; up to 100 Impedance Points ZPLBOV Z Plot Binary Search, Voltage; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRV Z Plot Linear Ramp, Voltage; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPLPRV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	
TIMEF Operate Time for Frequency Shift TIMEI Operate Time for Step Change in Current TIMEPH Operate Time for Step Change in Phase TIMEV Operate Time for Step Change in Voltage TOCPLT Current vs. Time Characteristic; 12 Points with Pass/Fail TOVPLT Voltage vs. Time Characteristic; 12 Points with Pass/Fail TPHPLT Phase Shift vs. Time Characteristic; 12 Points with Pass/Fail ZPLBOI Z Plot Binary Search, Current; up to 100 Impedance Points ZPLBOV Z Plot Binary Search, Voltage; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRV Z Plot Linear Ramp, Voltage; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPLPRV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	
TIMEI Operate Time for Step Change in Current TIMEPH Operate Time for Step Change in Phase TIMEV Operate Time for Step Change in Voltage TOCPLT Current vs. Time Characteristic; 12 Points with Pass/Fail TOVPLT Voltage vs. Time Characteristic; 12 Points with Pass/Fail TPHPLT Phase Shift vs. Time Characteristic; 12 Points with Pass/Fail ZPLBOI Z Plot Binary Search, Current; up to 100 Impedance Points ZPLBOI Z Plot Binary Search, Voltage; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRV Z Plot Linear Ramp, Voltage; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPLPRV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	TFRPLT Frequency vs. Time Characteristic; 12 Points with Pass/Fail
TIMEPH Operate Time for Step Change in Phase TIMEV Operate Time for Step Change in Voltage TOCPLT Current vs. Time Characteristic; 12 Points with Pass/Fail TOVPLT Voltage vs. Time Characteristic; 12 Points with Pass/Fail TPHPLT Phase Shift vs. Time Characteristic; 12 Points with Pass/Fail ZPLBOI Z Plot Binary Search, Current; up to 100 Impedance Points ZPLBOV Z Plot Binary Search, Voltage; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRV Z Plot Linear Ramp, Voltage; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPLPRV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	TIMEF Operate Time for Frequency Shift
TIMEV Operate Time for Step Change in Voltage TOCPLT Current vs. Time Characteristic; 12 Points with Pass/Fail TOVPLT Voltage vs. Time Characteristic; 12 Points with Pass/Fail TPHPLT Phase Shift vs. Time Characteristic; 12 Points with Pass/Fail ZPLBOI Z Plot Binary Search, Current; up to 100 Impedance Points ZPLBOV Z Plot Binary Search, Voltage; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRV Z Plot Linear Ramp, Voltage; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPLPRV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	
TOCPLT Current vs. Time Characteristic; 12 Points with Pass/Fail TOVPLT Voltage vs. Time Characteristic; 12 Points with Pass/Fail TPHPLT Phase Shift vs. Time Characteristic; 12 Points with Pass/Fail ZPLBOI Z Plot Binary Search, Current; up to 100 Impedance Points ZPLBOV Z Plot Binary Search, Voltage; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRV Z Plot Linear Ramp, Voltage; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPXBOI Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	
TOVPLT Voltage vs. Time Characteristic; 12 Points with Pass/Fail TPHPLT Phase Shift vs. Time Characteristic; 12 Points with Pass/Fail ZPLBOI Z Plot Binary Search, Current; up to 100 Impedance Points ZPLBOV Z Plot Binary Search, Voltage; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRV Z Plot Linear Ramp, Voltage; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPLPRV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	TIMEV Operate Time for Step Change in Voltage
TPHPLT Phase Shift vs. Time Characteristic; 12 Points with Pass/Fail ZPLBOI Z Plot Binary Search, Current; up to 100 Impedance Points ZPLBOV Z Plot Binary Search, Voltage; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRV Z Plot Linear Ramp, Voltage; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPLPRV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	
ZPLBOI Z Plot Binary Search, Current; up to 100 Impedance Points ZPLBOV Z Plot Binary Search, Voltage; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRV Z Plot Linear Ramp, Voltage; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPXBOI Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	
ZPLBOV Z Plot Binary Search, Voltage; up to 100 Impedance Points ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRV Z Plot Linear Ramp, Voltage; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPLPRV Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	
ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points ZPLLRV Z Plot Linear Ramp, Voltage; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPXBOI Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	
ZPLLRV Z Plot Linear Ramp, Voltage; up to 100 Impedance Points ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPXBOI Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	ZPLBOV Z Plot Binary Search, Voltage; up to 100 Impedance Points _
ZPLPRI Z Plot Pulsed Ramp, Current; up to 100 Impedance Points ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPXBOI Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	ZPLLRI Z Plot Linear Ramp, Current; up to 100 Impedance Points _
ZPLPRV Z Plot Pulsed Ramp, Voltage; up to 100 Impedance Points ZPXBOI Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	BILLENT B IIOC BINCAL NAMP, TOICAGO, AP OF ITS IMPORTATION
ZPXBOI Z Plot Binary Search, Current; 12 Points with Pass/Fail ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	
ZPXBOV Z Plot Binary Search, Voltage; 12 Points with Pass/Fail	
+ USE ENTER OR MOUSE CLICK TO SELECT, Esc TO RETURN , F1 to GRAPH	
	+ USE ENTER OR MOUSE CLICK TO SELECT, ESC TO RETURN , F1 to GRAPH

Fig. 7

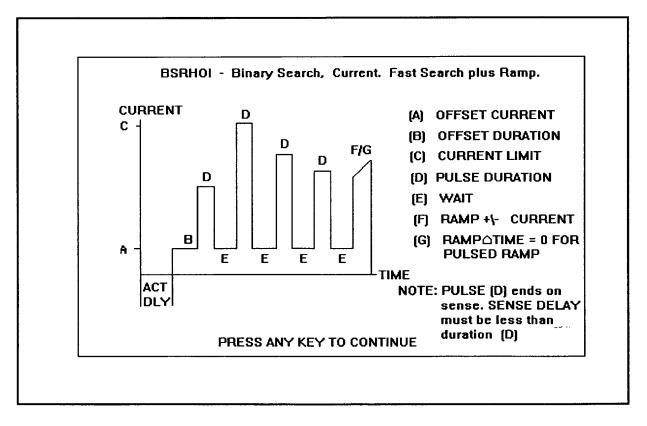


Fig. 8
Appendix
Doble Protest Testing

	DRAWN SIS	FILMED	REV	EM&P REI	AY PROCEDURES
Electric M aintenance $oldsymbol{\&}$	CHECKED MNS	APPROVED			
PROTECTION	DATE 2/15/99		0	SHEET 7 of 12	RLY - 4.03.01.01

3	EL	321		MULTI			1	1	L.	GANATRA	
				-				COMMENT	s 		!
								A-B REACH TEST			;
	2	CHANGE	SWITCH	NOTEBE	NO	l	NO	SELECTOR SWITCH	TO	A-GRD POSITION	1 R
		1		1	1	1	1	!		•	ŀ
		I		1	1	1	ŀ	1			1
		!		!	!	1	1	!			ı
		1		ì	i	i	i	i			į
-		 		i 	i 	i TRS'	፤ ጥ DT.Δ1	i N			i
						120		•			•
									Da	te: 03/23/98	

Fig. 9

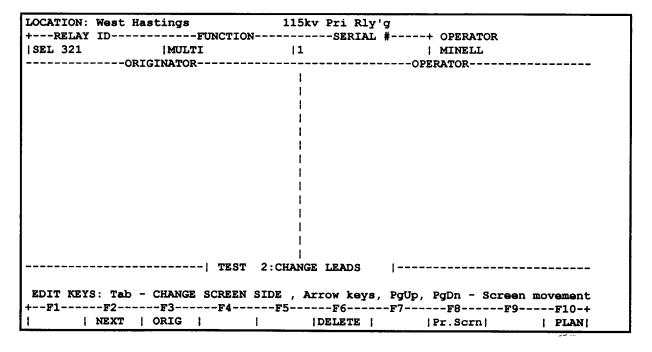


Fig. 10

XCEL ENERGY COMPANY	DRAWN SIS	FILMED	REV		EM&P REL	AY PROCEDURES
Electric Maintenance &	CHECKED MNS	APPROVED				
Protection	DATE 2/15/99		0	SHEET	8 of 12	RLY - 4.03.01.01

Xcel Energy, Inc. Preventive Maintenance Plan PSC 113.0607

Page 9 Tab 11

!	7.7			SENSE:	CONTACTS	O ^-										1 1 1		F10-+	PLAN
	OR MEM=		3		VOLTS C	CYCLES;0	VOLTS!	CXCLES!	CYCLES!	VOLTS	CYCLES			 	~ % % O O I O	 		F9	
	+ OPERATOR	MINETT	CONDITIONS-		70.00	30	00.00	D O	10 (-0.100 VOLTS	D O				0.00 VOLTS + 0% 0.00 ERR			F8	Pr.Scrn
Rly'g	л #		ACTION CO		VOLTAGE:	DURATION:	LIMIT:	DURATION:		TAGE:					0.00 VO	1	-	E7	
115kv Pri Rly'g	SERIAL				A)OFFSET V	(B)OFFSET D	C) VOLTAGE LIMIT:	(D) PULSE DU	:)WAIT:	F) + / -□ VOLTAGE:	(G)□ TIME :				(PECTED: ACTUAL:	3 REACH	TEST	E6	PLOT
	N			FREQ !	HZ ; (P	60.00; (E	60.001(0	1) 100.09	60.00; (E)	E)			ST MACRO!	 00 	ST		FOR	E2	: DATA
	FUNCTION	II	IONS	UE	PHASE-+-	0.0	-120.0;	-240.0;	45.0				ProTesT	BSRHOV	O	TEST	STOR	E4	NOTES
West Hastings		HULLI	T CONDITIONS-	VALUE	ASS+HILO-+-AMPLPHASE	ACTION	ACTION -120.	1 70.00;-240.	5.00			+00.0	·	 SENSE	0.0SEC-ZERO X 0.0SEC-ZERO X 0CY -DURATI		HAVE BEEN	<u>F</u> 3	
i	AY ID		PRESET	SRC; CONNECTIONS	-0TI			- -						 	DELAY DELAY DELAY		NO RESULTS H		NEXT
LOCATION:	+RELAY	SEL 321	1	SRCCON	ASS+H	VA	VB ;	VC	11			BAT		 MA	PRESET: ACTION:		NO R	+ - - - -	, RUN

Fig. 11

XCEL ENERGY COMPANY	DRAWN SIS	FILMED	REV	EM&P RELAY	EM&P RELAY PROCEDURES
Electric Maintenance &	CHECKED MINS	APROVED			
PROTECTION	DATE 2/15/99		<u> </u>	SHEET 9 of 122 RLY - 4.03.01.01	RLY - 4.03.01.01

Xcel Energy, Inc. Preventive Maintenance Plan PSC 113.0607

Page 10 Tab 11

-+ OPERATOR MEM= 104 L. GANATRA PARAMETERS	STATE SIMULATOR TIMER RESULTS	+ 0% - 0% ERR 0.0%	+ 0% 0% Err 0.0%	+ 0% - 0% Err 0.0%		F8F9F10-+ Pr.Scrn REMOVE PLAN
	IMULATOR	0.00	00.0	00.00	! ! !	F7
115kv Pri Rly'g SERIAL #	STATE SI	EXPECTED 1: ACTUAL:	EXPECTED 2: ACTUAL:	EXPECTED 3: ACTUAL:	1:A-B REACH THIS TEST	F6
tings FUNCTION MULTI CTIONS					r FOR	F4F5 NOTES DATA
LOCATION: West Hastings +RELAY IDFUNCTION SEL 321 MULTI INSTRUCTIONS THIS MACRO EXECUTES STATE SIMULA			MSEC		RESULTS HAVE BEEN STORED	ι
LOCATION: West Hastings +RELAY ID			TIMER UNITS:		RESU	+F1F2F3 RUN NEXT USER
LOCATION +RELA SEL 321 		BAT	TIMER		NO.	+F1

Appendix Doble Protest Testing

XCEL ENERGY COMPANY	DRAWN SIS	FILMED	REV	EM	&P REL/	EM&P RELAY PROCEDURES
Electric Maintenance &	CHECKED MINS	APROVED				
PROTECTION	DATE 2/15/99		0	SHEET 10 of		RLY - 4.03.01.01
				122		

Page 11 Tab 11

Xcel Energy, Inc. Preventive Maintenance Plan PSC 113.0607

Fig. 12

Appendix Doble Protest Testing

XCEL ENERGY COMPANY	DRAWN SIS	FILMED	REV	EM&P REL	M&P RELAY PROCEDURES
Electric Maintenance &	CHECKED MINS	APROVED			
PROTECTION	DATE 2/15/99		0	SHEET 11 of	SHEET 11 of RLY - 4.03.01.01
				122	

Xcel Energy, Inc. Preventive Maintenance Plan PSC 113.0607

Page 12 Tab 11

+		7					 	 	 	 : :				- - 0
		FREQ	09	09	09	09	 	 	 	 				£10
	Post-Fault	FREQ-+AMPLPHASE-	0-	1-120	1-240	<u>o-</u>	 	 	 	 	60 CY TIME	 	••	8B
	Post-	Q-+AMPI	169.3	69.3	169.3	0-	 	 	 	 	9	TIMER	TIMER	. F7F8
			09	09	09	09	 	 	 	 	 	 	 ∪ ^	9
		PHASE-	<u>o -</u>	1-120	-240	1-75	 	 	 	 	20 CY TIME	Fault	CONTACT 0 -> C Status.	-F5E6.
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!	Fault	-FREQ-+AMPL-	120	69.3	69.3	120	 	 	 	 	20		0 MS CC Requesting St	
1 1 1	 		09	09 1	09	09	 	 	 	 	 	TIME		F4 -
	ult	-AMPLPHASE-	<u> </u>	1-120	-240	1-10	 	 	 	 	120 CY TIME	A 0	IG:SYSTE se Wait.	<u>F</u> 3-
	Pre-Fault	+AMPL-	69.3	69.3	69.3	. <u></u>	 	 	 ·	 	120	BATTERY SIM: 0	ZERO CROSSING:SYSTEM MESSAGE: Please Wait	E2
1	SRC	+	VA	Z.	ΛC	HI	 	 	 	 	TIME		ZERC Messag	- +

Appendix Doble Protest Testing

VICTOR ENEDOVOCAMENTA	Parama, CIC FILMED	FILMED	REV	EM&P REL	EM&P RELAY PROCEDURES
	DICAMIN SIS		1		
Electric Maintenance &	CHECKED MINS	APPROVED			
Protection	DATE 2/15/99		0	SHEET 12 of	SHEET 12 of RLY - 4.03.01.01
				122	

Page 13 Tab 11

Xcel Energy, Inc.
Preventive Maintenance Plan
PSC 113.0607

Fig. 13

Appendix Doble Protest Testing

CEL ENERGY COMPANY	PILMED FILMED	FILMED	REV	EM&P	EM&P RELAY PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MNS APPROVED	APROVED			
PROTECTION	DATE 2/15/99		0	SHEET 13 of	SHEET 13 of RLY - 4.03.01.01
				771	

Electrical Functional Testing of Solid State Distance Relaying System including Power Swing Block

1. Purpose

To describe the method of Electrical Functional testing to verify the reliable performance of the Solid State Distance Relaying System (including power swing blocking of reclosing) based on the specified settings and applications. The devices under test include, but are not limited to the following:

	Function	Relay	Instruction	
	Number	Type	<u>Description</u>	<u>Leaflets</u>
1.1.	21S1	SKDU	Zone1-Phase Distance	
1.2.	21S2	SKDU	Zone2-Phase Distance	
1.3.	21GS1	SDGU – 1/7	Zone1-Ground Distance	
1.4.	21GS2	SDGU – 1/6	Zone2-Ground Distance	
1.5.	67GTS	IRD-9	Ground Time Overcurrent	
1.6.	68S	SDBU - 2/SKSU	Out of Step/Power Swing	
1.7.	50S, 50SH	SIU	Overcurrent Fault Detector &	& Inst. hi set ele.
1.8.	95S	SRU	Static Relay Unit	
			(Contains various Timers an	d other Logic)

2. <u>Definitions</u>

- 2.1.
- 2.2.

3. Equipment Needed

3.1. Test Equipment

- 3.1.1. Doble Test Set containing three (3) phase Voltage and one(1) high Current units at minimum.
- 3.1.2. Lap Top Computer
- 3.1.3. Digital Multimeter
- 3.1.4. Oscilloscope
- 3.1.5. Switch Box

3.2. Software

- 3.2.1. Doble Protest program.
 - 3.2.1.1.Relay System Test Plan for the Solid State Distance Scheme

3.3. Other

- 3.3.1. Equipment Tag
- 3.3.2. Spare Capacitors, Resistors, transistors and diodes for SKDU, SDGU and SDBU Relays.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P REI	AY PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MNS	APPROVED			
Protection	DATE 2/15/99		0	SHEET 1 of 5	RLY - 6.07.01

4.	Refe	rences

- 4.1. Doble Protest Testing Procedure <u>RLY 4.3.01.01</u>
- 4.2. M&R
- 4.3. A.C. & D.C. Schematics
- 4.4. Relay Test Sheets
- 4.5. XCEL ENERGY Safety Manual

tested.

4.6. XCEL ENERGY Control Standard Book

5. Procedure

Preca	utions
5.1.1.	Identify the panel and the devices which will be tested (refer to the Schematic, Relay Test Sheets and RFO). Set the Doble Test equipment in front or near the panel.
5.1.2.	Call DISPATCHER for CLEARANCE.
5.1.3.	Turn off all 97 switches for PROPER CLEARANCE.
5.1.4.	Open ALL appropriate trip switches- COUNT TRIP SWITCHES OPENED. Compare to the schematics and Trip Switch Index.
EXTR TAKE	TY NOTE EME CAUTION MUST BE TAKEN WHEN ISOLATING CT'S. CARE TO OBSERVE ALL SAFETY PRECAUTIONS WHILE ORMING STEPS (5.1.5 – 5.1.8)!!
	FION: High Voltage could occur if CT's are opened while connected energized circuit.
5.1.5.	Isolate relays to be tested by opening the CT blocking bar or flexitest shorting switches associated with the correct line relays according to the A.C. schematic.
5.1.6.	Note: Be sure to open each CT isolating or shorting switch SLOWLY; ONE-AT-TIME, making sure that the AC input current to the panel is shorted by the switch as you open it. Take your time and refer to the A.C. Schematic.
517	Isolate A.C. potential source to the relay system being

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P RE	LAY PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MNS	APPROVED			
PROTECTION	DATE 2/15/99		0	SHEET 2 of 5	RLY - 6.07.01

Methods of isolation:

- 1. <u>Switches</u>: Verify with a voltmeter that the potential is present on the blades of the potential isolating switches and <u>NOT ON THE CLIPS.</u>
- 2. <u>Fuse Blocks</u>: Verify with a voltmeter that the potential is present on the top fuse block clips and **NOT ON THE BOTTOM.**
- Panel Fuses: Verify with a voltmeter that the potential is on the front terminal next to the panel and NOT TO THE BACK.
- 5.1.8. Connect potential test leads to the relay side of isolating source.
- 5.1.9. Verify the DC control voltage to the relay system is as shown in D.C. schematic.

5.2. Instructions

- 5.2.1. Connect Doble F2xxx units as you would normally do for testing of the relay scheme.
- 5.2.2. Connect COM1 RS232 serial port (9 pin male) of your laptop to RS232 port (25 pin female) of a Doble unit. 3 ADT is the cable to be used connecting the two ports.
- 5.2.3. Connect the Doble test set to the isolated input current and voltage terminals.

 (Sensing leads from Doble test set should be across the entire tripping path and include all relays under test to ensure the complete continuity for test plan simulation.)
- 5.2.4. Verify the test plan for the system
- 5.2.5. Test the relay system as per <u>Doble Protest Test Plan</u>.
- 5.2.6. The test plan makes use of Doble State Simulator Macro. The State Simulator simulates the fault condition from normal operation. The fault currents and voltages used were derived from previously run fault studies in CAPE. Various types of internal and external faults are simulated. Fault currents and voltages are taken from the simulation and incorporated in the test plan. The test plan will indicate what relays will operate in which test condition. If there is any discrepancy, make a note.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P REI	AY PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MNS	APPROVED			
PROTECTION	DATE 2/15/99		0	SHEET 3 of 5	RLY - 6.07.01

5.3.

follow 5.3.1. 5.3.2. 5.3.3. 5.3.4.	Remove all Doble test leads from the relay inputs. Verify all other wires have been removed from the relay system. Remove all jumpers, if there are any Verify all potential fuses have been installed. Remove any current isolating devices and close all Potential and Current switches(e.g. FT switch). Verify with a A.C. voltmeter that all potential inputs at the relays are energized. Put the FT switch cover.	
follow 5.3.1. 5.3.2. 5.3.3.	Remove all Doble test leads from the relay inputs. Verify all other wires have been removed from the relay system. Remove all jumpers, if there are any	
follow 5.3.1. 5.3.2.	Remove all Doble test leads from the relay inputs. Verify all other wires have been removed from the relay system.	
follow 5.3.1.	the items below: Remove all Doble test leads from the relay inputs. Verify all other wires have been removed from the relay	
follow	the items below:	
<u>Close</u>	<u>-out</u> testing is completed successfully, <u>before clearing with the dispatcher</u>	,
5.2.10	If the relay and/or SRU appears to be functioning incorrectly, it may require recalibration or repair. Please make a note of the problem and inform the Scheduler to schedule the repair as soon as possible. However, please proceed with testing the other functions instead of attempting to repair the problem.	
5.2.9.	If the relay does not operate at the test sheet values and if the Relay Engineer finds the test sheet values are wrong, then get new values and retest the relay.	
5.2.8.	Contact a Relay Engineer and ask the engineer to verify the settings. The engineer should also be requested to verify the test currents and voltages. If the engineer confirms that everything is correct, do not change anything if the relay operates correctly at those values. The Relay is in good operating condition. The Engineer has the responsibility to check the fault study at a later time.	
	retest the relay in question using the values from the Relay Test Sheet.	
5.2.7.	If any of the relays fails to perform as expected, check the relay independent of the SRU to determine whether the problem lies in the SRU or the relay. If it lies in the relay,	

Xcel Energy - North	DRAWN SIS	FILMED	REV		EM&P REI	AY PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MNS	APPROVED				
PROTECTION	DATE 2/15/99		0	SHEET	4 of 5	RLY - 6.07.01

ON position.

Xcel Energy - North	DRAWN SIS	FILMED	REV		EM&P REI	AY PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MNS	APPROVED		CHERT		DIV (07.01
PROTECTION	DATE 2/15/99	<u> </u>		SHEET	5 01 5	RLY - 6.07.01

Transformer Detailed Inspection

1. Purpose

The purpose of this procedure is to provide instructions for the testing and maintenance of the Power and Distribution Transformers for Mechanical and Electrical Integrity.

2. <u>Definitions</u>

- 2.1. Testing and repairs includes the following:
 - 2.1.1. Cleaning devices.
 - 2.1.2. Tightening and re-gasketing on manhole cover, bushing, etc.
 - 2.1.3. Replacement of failed parts with identical parts is allowable.
 - 2.1.4. Measuring and recording "as found" and "as left" conditions.

Note: Normal repairs do not include modifications of relays or control schemes.

- 2.2. "As Found" measurements are measurements made before any cleaning, adjusting, or repairing is done on a device.
- 2.3. "As Left" measurements are measurements made after cleaning, adjusting, and repairing have been completed on a device.
- 2.4. Bypass

Any device which blocks a component out of service or which prevents it from performing its intended function. Example: An electrical jumper or lifted wires.

3. Equipment Needed

3.1. Properly stocked maintenance vehicle.

4. References

- 4.1. Electrical
 - 4.1.1. Transformer Instruction Book.
 - 4.1.2. Single-line diagrams.
 - 4.1.3. Three-line diagrams.
- 4.2. Standards
 - 4.2.1. ANSI-C57.12.00-1993, General requirements for Liquid-Immersed Distribution, Power and Regulating Transformers.

Xcel Energy - North CHECKED APPROVED		
HI ECTRIC IVI AINTENANCE OV.	SHEET 1 of 5	APP - 6.017.05

5. Procedure

5.1. Precautions

- 5.1.1. Maintenance provider personnel shall take necessary precautions to prevent accidental contact with high voltage equipment as per the XCEL ENERGY Safety Manual.
- 5.1.2. Flammable solvents and cleaning fluids shall be kept in approved containers. The containers shall be labeled *FLAMMABLE* and shall have the type of material indicated on them per (MSDS).
- 5.1.3. All material must be on the approved list of XCEL ENERGY Hazardous Material procurement program.
- 5.1.4. Maintenance provider personnel shall take necessary precautions for the following:
 - 5.1.4.1. Shall take necessary precautions to properly ground equipment to discharge capacitive charges induced through service or testing.
 - 5.1.4.2.Shall take necessary precautions never to touch any leads, terminal, bushings, etc., with test equipment energized. A transformer with a high turn to turn ratio transforms very small input voltages into dangerously high output voltages.
 - 5.1.4.3.Post "Danger High Voltage" signs as necessary and barricade appropriate areas on top of the transformer and the ground for personnel protection.
 - 5.1.4.4.Covers or fittings shall not be opened unless zero gauge pressure exists inside the unit. Always relieve internal pressures slowly through valves.
- 5.1.5. Transformer oil must always be handled as flammable liquid. Closed transformer and load tap changer tanks may, under some conditions, accumulate explosive gases, and oil handling procedures may generate static electricity. Proper grounding is imperative.
- 5.1.6. Refer to the manufacture's instruction manual for test requirements and as certain manufactures may recommend additional tests which may not be included in the procedure.
- 5.1.7. Write N/A on the transformer Test Report for the tests not applicable to the transformer being tested.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
	CHECKED	APPROVED			
PROTECTION	DATE 1/4/01		2	SHEET 2 of 5	APP - 6.017.05

5.2.	<u>1 est</u>		
NOTE	docum	pen in completing all forms. Results of the following step tented on Transformer and LTC Detailed Inspection L step of these instructions shall be initialed prior to starting	ist Pages.
	5.2.1.	If required, Verify Supervisor has authorized work to start.	
	· 5.2.2.	Tailgate (See tailgate check-off list).	
	5.2.3.	Inspect the transformer and accessories for external physical damage to paint finish, tanks, radiators, bushings and any indications of leaks. Record "as found" and "as left" condition in comment section on Transformer and LTC Detailed Inspection List.	
	5.2.4.	Check oil levels on Main Tank, Conservator Tank, Load Tap Changer and Bushings. Record "as found" and "as left" oil levels in comment section on Transformer and LTC Detailed Inspection List.	
	5.2.5.	Inspect and ensure that the case and core assembly of the transformer are permanently and adequately grounded. Record "as found" and "as left" condition in comment section on Transformer and LTC Detailed Inspection List.	
	5.2.6.	Inspect and ensure that ground resistors are properly installed and free of damage. Record "as found" and "as left" condition in comment section on Transformer and LTC Detailed Inspection List.	
	5.2.7.	Inspect fans for vibration and condition of blade. Ensure that fans motor are lubricated and that connections are in good working order. Record "as found" and "as left" condition in comment section on Transformer and LTC Detailed Inspection List.	···
	5.2.8.	Inspect pumps for oil leaks, vibration, check flow gauge rotation and that connections are in good working order. Record "as found" and "as left" condition in comment section on Transformer and LTC Detailed Inspection List.	

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	PPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
PROTECTION	DATE 1/4/01		2	SHEET 3 of 5	APP - 6.017.05

	5.2.9.	Inspect Control Cabinet for moisture and condition of door gaskets. Check relay coils for excessive noise, discoloring, burning odor and charred wiring, check connections for tightness and check heaters. Record "as found" and "as left" condition in comment section on Transformer and LTC Detailed Inspection List.	
5.3.	Close-	<u>out</u>	i
	5.3.1.	Complete the Transformer and LTC Detailed Inspection List. Record all required information including "As Found" conditions that may have prevented proper operation of the transformer.	
	5.3.2.	Ensure all data forms are completed and attached.	
	5.3.3.	Reviewed by System Engineer.	

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
PROTECTION	DATE 1/4/01		2	SHEET 4 of 5	APP - 6.017.05

TRANSFORMERS AND LTC DETAILED INSPECTION LIST (attach as many sheets as necessary)

	Substation _ Transfo	rmer #		
-	nform – Systems Operation, Trouble ne substation performing maintenanc			Dispatch, that you are in
			Needs	
		Condition	Attn.	<u>Remarks</u>
-	isually inspect general condition of			
	quipment:			
	Bushings (oil levels, broken etc.)			
	Oil levels (main tank and LTC)			William Committee of the Committee of th
c)	Control cabinet (fuses, heaters,			
	thermostats etc.)	-		
d)) Is the TR schematic in the control			
	cabinet?			***************************************
e)	Oil leaks			
f)	Grounding connections			
g)	Operate fans and pumps (lubricate)			
h	Change Nitrogen bottle if under 600			
	psi			
i)				
i)	• • • • • • • • • • • • • • • • • • • •			
• • •	Note any conditions requiring an			
•	outage to repair			
) T	ake oil dielectric on all LTC's with Vac	2		-
,	ottle. (If test shows heavy carbon and			
	ne dielectric is <25kV, record remarks.)			
	ake gas-in-oil on all LTC's without Vac			
•	ottle (Bring sample to CSC testing	C		
	boratory)			
	te any conditions requiring an outage	to repair.	Remove	defective fans for repair.
Com	ments:			
	-			
		······		
	Complete inspection	1 , 1		CO

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL APPARATUS PROCEDUI		
ELECTRIC MAINTENANCE &	CHECKED	APPROVED				
PROTECTION	DATE 1/4/01		2	SHEET 5 of 5	APP - 6.017.05	

Transformer Electrical Testing

1. Purpose

The purpose of this procedure is to provide instructions for the testing of Power and Distribution Transformers for Mechanical and Electrical Integrity.

2. Definitions

- 2.1. <u>Testing and repairs</u> includes the following:
 - 2.1.1. Cleaning devices.
 - 2.1.2. Measuring and recording "as found" and "as left" conditions.
- 2.2. <u>As Found"</u> measurements are measurements made before any cleaning, adjusting, or repairing is done on a device.
- 2.3. "As Left" measurements are measurements made after cleaning, adjusting, and repairing have been completed on a device.

2.4. Bypass

Any device which blocks a component out of service or which prevents it from performing its intended function. Example: An electrical jumper or lifted wires.

2.5. <u>Maintenance Provider Technician</u>

That individual, trained and qualified in accordance with appropriate testing instructions and procedures, who has been designated by the Supervisor as having the responsibility for the correct performance of the work required by this procedure.

3. Equipment Needed

- 3.1. "Danger High Voltage" signs and barricades
- 3.2. Doble Automated Insulation Analyzer (M4000)
- 3.3. Transformer turns ratio test set (Biddle)
- 3.4. Transformer Ohmmeter Test set (Multi-Amp)
- 3.5. Hypotronics Oil Dielectric Test set with D1816 test cell (when required)
- 3.6. Portable grounds
- 3.7. Liquid-insulator cell
- 3.8. Oil sample bottles and Test Lab Data Sheets (as needed)
- 3.9. Disk or M4000 loaded with all nameplate information on the transformer, LTC, bushings, and surge arresters. This information is available directly from the Office System via modem.
- 3.10. Doble leakage reactance test set (as required)
- 3.11. Core demagnetization equipment
- 3.12. Megger

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MIS	APPROVED			
Protection	DATE 2/11/99		1	SHEET 1 of 9	APP - 6.017.04

4. References

4.1. Electrical

- 4.1.1. Maintenance File(s) (previous Doble test and maintenance data)
- 4.1.2. Nameplate
- 4.1.3. Doble Automated insulation Analyzer Instruction Book
- 4.1.4. Schematics or diagram of control circuit.
- 4.1.5. Single-line diagrams.
- 4.1.6. Three-line diagrams.
- 4.1.7. Relay and meter diagrams.
- 4.1.8. Procedure for demagnetizing the core.
- 4.1.9. Procedure for dielectric oil breakdown testing with D1816 cup.
- 4.1.10. Manufacturer's instruction manual.

4.2. Standards

- 4.2.1. ANSI-C57.12.00-1980, General requirements for Liquid-Immersed Distribution, Power and Regulating Transformers.
- 4.2.2. ANSI-C57.12.90-1980, <u>Guide for short-circuit testing for Liquid-Immersed Distribution</u>, Power and Regulating Transformers.
- 4.2.3. ANSI-21-1976, General Requirements and Test Procedures for Outdoor Apparatus Bushings.

5. <u>Procedure</u>

5.1. Precautions

- 5.1.1. Verify station operator (maintenance crew) has isolated the transformer and operations has authorized work to start.
- 5.1.2. Maintenance provider personnel shall take necessary precautions to prevent accidental contact with high voltage equipment as per the XCEL ENERGY Safety Manual.
- 5.1.3. Flammable solvents and cleaning fluids shall be kept in approved containers. The containers shall be labeled *FLAMMABLE* and shall have the type of material indicated on them per (MSDS.)
- 5.1.4. All material must be on the approved list of XCEL ENERGY Hazardous Material procurement program.
- 5.1.5. Maintenance provider personnel shall take necessary precautions for the following:
 - 1. Shall take necessary precautions to properly ground equipment to discharge capacitive charges induced through service or testing.

	drawn SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MIS	APPROVED			
PROTECTION	DATE 2/11/99		1	SHEET 2 of 9	APP - 6.017.04

- 2. Shall take necessary precautions never to touch any leads, terminals, bushings, etc., with test equipment energized. A transformer with a high turn to turn ratio transforms very small input voltages into dangerously high output voltages.
- 3. Post "Danger High Voltage" signs as necessary and barricade appropriate areas on top of the transformer and the ground for personnel protection.
- 5.1.6. Refer to the manufacture's instruction manual for test requirements, manufactures may recommend additional tests which may not be included in the procedure.
- 5.1.7. Write N/A on the transformer Test Report for the tests not applicable to the transformer being tested.
- 5.1.8. After oil processing, you must wait at least 24 hours before performing the electrical tests.

5.2. <u>INSTRUCTIONS</u>

5.2.1. Tailgate (See tailgate check-off list.)

<u>NOTE</u>: Use pen in completing all forms. Results of the following steps shall be documented on Maintenance and Test Report Pages. Each step of these instructions shall be initialed prior to starting the next step.

<u>NOTE</u>: The following procedure covers testing for existing transformers and for new, rebuilt and moved transformers. Mark N/A for tests not applicable to the transformer being tested.

- 5.2.2. Check isolation, post necessary "Danger High Voltage" signs, and ensure that the top of transformer is barricade appropriately. On existing transformers, test for dead and place personal grounds on transformer and associated equipment.
- 5.2.3. Record any missing transformer and associated equipment information into Doble Automated Insulation Analyzer and verify information is correct with nameplate data on transformer and associated equipment.
- 5.2.4. Inspect and clean transformer bushings and surge arresters and ensure that they are dry. Record "as found" and "as left" in comment section on Maintenance and Test Report.

	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MIS	APPROVED			
Protection	DATE 2/11/99		1	SHEET 3 of 9	APP - 6.017.04

5.2.5.	On existing transformers , visually inspect and ensure that the case and core assembly of the transformer are permanently and adequately grounded. Record "as found" and "as left" condition in comment section on Maintenance and Test Report .

5.2.6. Power Factor

Perform Power Factor Test using the Doble Automated Insulation. Analyzer test set as follows:

- 1. On **existing transformers**, using the Doble Automated Insulation Analyzer test set, measure the power factor of each winding to ground and between windings (H-G, L-G, T-G, H-L, L-T, T-H) on the running tap.
- 2. On **new**, **rebuilt and moved transformers**, using the Doble Automated Insulation Analyzer test set, measure the power factor of each winding on the highest NLTC tap and LTC on neutral (if applicable).
- 3. Winding power factor shall not exceed the acceptable limit specified by the manufacture's instruction book. (XCEL ENERGY's standard is 0.5% on new equipment.)
- 4. Power factor measurements shall be temperature corrected in accordance with the Doble software.
- 5. Save data for uploading to the Office System.

5.2.7. Exciting Current

On existing transformers perform Exciting Current Tests using the Doble Automated Insulation Analyzer Test Set as follows:

- 1. Using the Doble Automated Insulation Analyzer Test Set, take exciting current test on each winding that the test set is capable of testing. If LTC exists, take exciting current for 16R, 1R, N and 1L.
- 2. Save data for uploading to the Office System.

5.2.8. Transformer Turns Ratio

On existing transformers perform (TTR) Transformer Turns Ratio tests using the Biddle test set as follows:

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL APPARATUS PROCEDURES		
ELECTRIC MAINTENANCE &	CHECKED MIS	APPROVED				
Protection	DATE 2/11/99		1	SHEET 4 of 9	APP - 6.017.04	

· · · · · · · · · · · · · · · · · · ·			-
	1.	Examine transformer NLTC tap for operating position and check nameplate for correct test connections. Enter the nameplate data on the Doble M4000 TTR page .	
	2.	Using the transformer turns ratio test set, take the turns ratio measurements on running NLTC tap and data on the Doble M4000 TTR page. (If LTC exists, set in neutral position.)	
	3.	If LTC exists, with the NLTC on the running tap, test half of the LTC taps (16R - 1L)	-
5.2.9.	W i	inding Resistance	
		erform Winding Resistance measurements using the Multi-Amp immeter as follows:	
	1.	Examine transformer NLTC tap for operating position and check nameplate for correct test connections.	
	2.	On existing transformers, using the Transformer Ohmmeter Test set, take the Winding Resistance test on the running NLTC tap and record data on the Doble M4000 diagnostics page in a note.	
	3.	On new, rebuilt, and moved transformers, using the Transformer Ohmmeter Test set, take the Winding Resistance test on each NLTC tap. With LTC (if applicable) test with LTC on neutral and each NLTC tap and with the NLTC on the highest tap (tap A), test half of the LTC taps (16R - 1L) and record data on the Doble M4000 diagnostics page in a note.	
5.2.10	. <u>Bu</u>	<u>ushings</u>	
		all transformers perform Bushing Tests using the Doble atomated Insulation Analyzer Test Set as follows:	
	1.	For bushings equipped with capacitance taps:	
		• Test for capacitance and power factor in UST (ungrounded specimen test) test mode (C1). If C1 test is not rated "G" by DTA, shoot C1 backwards (UST mode test) and Tip-Up test, as needed.	
		 Test capacitance tap insulation in GST (ground specimen test) guard, test mode (C2). 	
	2.	For bushings not equipped with capacitance taps, measure the Watts loss of the bushing using the "Hot Collar Test"	

TRANSFORMER ELECTRICAL TESTING

Save data for uploading to the Office System.

	DRAWN SIS	FILMED	REV EM&P PHYSICAL		APPARATUS PROCEDURES	
ELECTRIC MAINTENANCE &	CHECKED MIS	APPROVED				
Protection	DATE 2/11/99		1	SHEET 5 of 9	APP - 6.017.04	

5.	2.	1	1	Surge	Arresters

On all transformers, perform Surge Arrester Test using the Doble Automated Insulation Analyzer Test Set, as follows:

- 1. Using the Doble Automated Insulation Analyzer Test Set, take overall insulation test on Surge Arrester. If surge arresters are stacked, test each individual surge arrester in the stack.
- 2. Save data for uploading to the Office System.

5.2.12. Oil Power Factor

On all transformers, take insulating oil sample the liquid-insulator cell and take a power factor test. (Test both the main tank oil and the LTC oil when applicable.) Note: Sample must be taken under positive pressure, flush sampling valve, drain approximately one quart of oil and discard to ensure sample is not contaminated. Record power factor results on **Doble M4000 diagnostics page**.

- 5.2.13. Insulating Oil, Karl Fisher, PCB and Gas-In-Oil (When Required)
 On new, rebuilt, moved transformers and in-service transformers, take a Karl Fisher, PCB and Gas-In-Oil test and complete the Testing Lab Data Sheet and forward to qualified testing laboratory for analysis, as soon as possible. Note: Sample must be taken under positive pressure; flush sampling value, drain approximately one quart of oil and discard to ensure sample is not contaminated. (See oil sampling procedure.)
- 5.2.14. <u>Dielectric Breakdown Voltage of Insulating Oil</u> (When Required)
 On new, rebuilt, moved transformers and in-service transformers, perform the ASTM D1816 test using the Hypotronics Oil Dielectric Test Set. (See oil sampling procedure.)

5.2.15. Megger Core Ground

Test if the core ground is accessible without opening the transformer.

5.3. Close-out

- 5.3.1. Reconnect any transformer grounds that may have been removed for testing.
- 5.3.2. Remove all temporary jumpers used for testing. On existing transformers replace all lifted wires and torque connections.

Xcel Energy - North	DRAWN SIS	FILMED	REV EM&P PHYSICAL APPARATUS		APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MIS	APPROVED	1		
PROTECTION	DATE 2/11/99		1	SHEET 6 of 9	APP - 6.017.04

Xcel Energy, Inc.
Preventive Maintenance Plan
PSC 113.0607

Page 7 Tab 14

5.3.3.	On existing transformers Remove all personal safety grounds and barriers from top of transformer and release hold cards with Supervisor.	
5.3.4.	Complete the Maintenance and Test Report. Record all required information including "As Found" conditions that may have prevented proper operation of the transformer.	
5.3.5.	Insure all data forms are completed and attached.	
5.3.6.	Return DTA test data via modem (or disk if the modem is not accessible.	
5.3.7.	Reviewed by Engineer.	

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MIS	APPROVED			
Protection	DATE 2/11/99	1	1	SHEET 7 of 9	APP - 6.017.04

MAINTENANCE AND TEST REPORT

			DATE					
	hall be identified below:							
	Name (Print or write l		<u>itle</u>	í				
			EQUII	PMENT				
CRIAL#	21/2 121041·		PEM#					
AMEPLATE DAT	TA							
ANUFACTURER	<u> </u>		CLAS	S				
OLTAGE		MVA	INST.	ВООК				
YPE MAINTENA	NCE INITIAL	MAJOR	MINOR	EMERGENCY				
14.4								

	DRAWN OID	FILMED	REV EM&P PHYSICAL APPARATUS PROCEDURES			
ELECTRIC MAINTENANCE &	CHECKED MIS	APPROVED				
Protection	DATE 2/11/99		1	SHEET 8 of 9	APP - 6.017.04	

MAINTENANCE AND TEST REPORT

PARTS USED

NOTE: ALL PARTS MUST BE CHARGED OUT OF STOCK SYSTEM

QUANTITY	PART NAME	PART NUMBER	XCEL ENERGY/STOCK NO.
	INSTRUMENTS	AND CALIBRATION	
<u>Instrument Name</u> Transformer Turns Ratio	Number	<u>Last Calibration</u>	Next Calibration
Transformer Ohmmeter			
Doble Automated Insulation Analyzer			
		-	

	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED MIS	APPROVED			
Protection	DATE 2/11/99		1	SHEET 9 of 9	APP - 6.017.04

Transformer Oil Sampling

1. Purpose

The purpose of this procedure is to provide instructions for the drawing Insulating Oil from Power and Distribution Transformers to determine the quality of the insulating oil.

2. Definitions

- **2.1. Drawing Insulating Oil** includes the following:
 - 2.1.1. Cleaning the sampling valve before taking the sample.
 - 2.1.2. Draining approximately a quart of insulating oil before taking the sample
 - 2.1.3. Taking the sample and sealing the sample container securely and filling out the Testing Lab Test Sheet.
 - 2.1.4. Forwarding the sample to laboratory as soon as possible for testing.

3. Equipment Needed

- 3.1. Hypertronics Oil Dielectric Test set
- 3.2. D1816 cup or D877 cup (as required)
- 3.3. Sampling syringe, stopcocks and tubing
- 3.4. Plastic 1-quart oil sample bottles
- 3.5. Special sample bottle with aluminum foil gasket for Karl Fisher test
- 3.6. Special PCB sample bottle
- 3.7. Test Lab Data sheets and labels

4. References

- 4.1. Evaluation of Transformer Insulating Oil
 - 4.1.1. Transformer Instruction Book.
 - 4.1.2. A Guide to Transformer Maintenance by S.D.Myers
 - 4.1.3. Corporate PCB and Oil Management Plan.

4.2. Standards

- 4.2.1. ASTM Book of Standards, Part 40, D-974, P. 333 (1980 Edition)
- 4.2.2. ASTM D-877 Dielectric Breakdown Strength, ASTM D-947 Neut. Number, ASTM D-971 IFT, ASTM Specific Gravity, is a laboratory test from plastic quart bottle with Insulating Oil sample.
- 4.2.3. ASTM D-1816 Dielectric Breakdown Voltage is a field test using the Hypotronics Oil Dielectric Test set.

	DRAWN GIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
Protection	DATE 1/25/99		0	SHEET 1 of 8	APP - 6.017.03

- 4.2.4. ASTM D-924 Power Factor at 25 degrees C is a test done with a liquid-insulator cell tester, using a Doble Automated Insulator Analyzer and taking a (UST) Ungrounded Specimen Test at 10KV.
- 4.2.5. ASTM D-1533 Karl Fischer is a laboratory test used to determine the total moisture content in parts per million (PPM).
- 4.2.6. ASTM D-3612 Gas-in Oil is a laboratory test revealing PPM of combustible gasses dissolved in the oil.
- 4.2.7. ASTM D-923-81 and classified per 40 CFR 761 PCB (POLYCHLORINATED BIPHENYLS) is a laboratory test to identify PCB contaminated oil in equipment.

5. Procedure

5.1. Precautions

- 5.1.1. Maintenance provider personnel shall take necessary precautions to prevent accidental contact with high voltage equipment as per the XCEL ENERGY Safety Manual.
- 5.1.2. Flammable solvents and cleaning fluids shall be kept in approved containers. The containers shall be labeled *FLAMMABLE* and shall have the type of material indicated on them per (MSDS).
- 5.1.3. All material must be on the approved list of XCEL ENERGY Hazardous Material procurement program.
- 5.1.4. Maintenance provider personnel shall take necessary precautions for the following:
 - 1. When sampling oil in energized equipment it is essential that the oil level in the equipment does not fall below the minimum operating level.
 - 2. Take sample from a unit only under positive pressure.
 - 3. Must flush sampling value before taking sample. Drain approximately one quart of insulating oil and discard to ensure oil sample is not contaminated
 - 4. Ensure that oil sample is protected from sunlight.
 - 5. Ensure that Testing Lab Data Sheet is completed correctly and sample is forwarded to testing laboratory as soon as possible.

	DRAWN SIS	FILMED	REV	EW&P PHYSICAL APPARATUS PROCEDI	
Electric M aintenance $\&$	CHECKED	APPROVED			
PROTECTION	DATE 1/25/99		0	SHEET 2 of 8	APP - 6.017.03

6. Write N/A on oil sample tests not taken in this procedure.

	Distinct GID	FILMED	REV	EM&P PHYSICAL APPARATUS PROCEDURES	
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
Protection	DATE 1/25/99		0	SHEET 3 of 8	APP - 6.017.03

5.2.

Instru	ictio	ons					
5.2.1.	Verify that unit information is correct on Testing Laboratory Data Sheet for unit being tested.						
5.2.2.	Fill in blanks on Testing Laboratory Data Sheet for oil temp., winding temp., ambient temp., date sampled, gallons of oil and what type of test is being taken.						
5.2.3.	Verify that the unit is under positive pressure before taking oil sample.						
5.2.4.	Ta						
	1.	Wipe clean the sampling valve before removing plug.					
	2.	Drain approximately one quart of insulating oil before actual oil sample is taken to ensure sampling value is clean.					
	3.	Thoroughly rinse plastic quart bottle with insulating oil before drawing oil sample.					
	4.	Draw oil sample, seal sample container securely and attach Testing Lab Test Report.					
	5.	The sampling valve should be wiped clean and adequately sealed.					
	6.	The oil sample should be protected from sunlight and forwarded to the laboratory for testing.					
5.2.5.	Tal	king Karl Fischer oil sample:					
	1.	Wipe clean the sampling valve before removing plug.					
	2.	Drain approximately a quart of insulating oil before actual oil sample is taken to ensure sampling valve is clean.					
	3.	Using special bottle with aluminum foil gasket supplied by testing laboratory, open bottle and insert clean plastic tube so end goes to bottom of bottle and oil fills from bottom. Allow bottle to overflow, then secure lid by putting aluminum foil over opening, install cap and tighten. Attach Testing Lab Test Report.					

	DRAWN SIS	FILMED	REV	EM&P PHYSICAL APPARATUS PROCEDURES	
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
Protection	DATE 1/25/99		0	SHEET 4 of 8	APP - 6.017.03

	4.	The sampling valve should be wiped clean and adequately sealed.	
	5.	The oil sample should be protected from sunlight and forward to the laboratory for testing.	
5.2.6.	Tal	king a Gas-in-Oil oil sample:	
	1.	Wipe clean the sampling valve before removing plug. '	
	2.	Drain approximately one quart of insulating oil before actual oil sample is taken to ensure sampling value is clean.	
	3.	With the Tygon tubing connected to the small sampling valve or through the hole in the drain-valve plug, adjust the valve for a gentle flow of oil through the tubing. Connect the syringe to the tubing with the syringe stopcock open to permit flushing of the stopcock.	
		Note: Syringe should be filled to 50 cc (twice) and all oil discharged. This is for cleaning the syringe. The third oil fill is the test sample	
	4.	Turn the stopcock slowly to the open position (handle in line with the flushing port) and allow 50 cc of oil to enter the syringe. Immediately close the stopcock (handle towards the syringe) and separate from the tubing. Allow the oil to continue to flow from the tubing.	
	5.	With the syringe vertical (stopcock up, handle away from the syringe), eject any air bubble and depress the syringe piston to bottom. Close the stopcock (handle toward the syringe).	
	6.	The syringe, bubble-free and with its dead volume filled with oil, is now reconnected to the tubing. Open the stopcock (handle in line with flushing port) and allow oil pressure to push the piston back until the syringe is filled to approximately the 50 cc mark. Note: Do not pull the piston manually since this can result in bubble formation.	
	7.	Close the stopcock (handle toward syringe) and separate it from tubing and inspect for air bubbles. If air is present,	

TRANSFORMER OIL SAMPLING

	drawn SIS	FILMED	REV	EM&P PHYSICAL A	PPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
Protection	DATE 1/25/99		0	SHEET 5 of 8	APP - 6.017.03

		discharge oil with syringe vertical (stopcock) up, handle away from the syringe and obtain another sample.	
	8.	The oil sample should be protected from sunlight.	
	9.	The sampling valve should be wiped clean and adequately sealed.	
	10.	Attach the completed Testing Lab Test Report and forward to laboratory for testing as soon as possible.	
5.2.7.	Tak	king a PCB (Polychlorinated Biphenyls) oil sample:	
	1.	Wipe clean the sampling valve before removing plug.	
	2.	Drain approximately one quart of insulating oil before actual oil sample is taken to ensure sampling valve is clean. The oil must be handled as PCB-contaminated and disposed of accordingly. Note: Do not use plastic tubing for sampling.	
	3.	Use special PCB oil sample bottles and special labels with a LT number assigned from Testing Laboratories for taking PCB sample.	
	4.	Fill the bottle at least half-full and cap tightly.	
	5.	The sampling valve should be wiped clean and adequately sealed.	
	6.	Place the label on the sample bottle, along with the Testing Lab Test Report and forward to laboratory for analysis.	
5.2.8.	Tak	ring a Dielectric Breakdown Voltage test:	
	mon show tran	e preferred test method is the ASTM D1816 test which is re sensitive to moisture and other contaminants. This ruld be used for all non free-breathing devices. When a resformer or LTC compartment is free-breathing, use the 77 test.	
		e: Never use the D1816 test for new oil or transformers that	

TRANSFORMER OIL SAMPLING

tankers, barrels, etc.

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
Protection	DATE 1/25/99		0	SHEET 6 of 8	APP - 6.017.03

1	Sat analysis of alastes do with 0.040 in alastes and according
1.	Set spacing of electrode with 0.040 inches gap gauge.
2.	Rinse cup a minimum of 2 times with specimen to be tested
3.	Examine electrode for pitting and contamination.
4.	The specimen should never be tested below 20 C. If the specimen temperature is below 20 C the specimen should be warmed up to 20 C.
5.	Set the Rate of Rise Selector Switch on the Hypotronics Oil Dielectric Test Set to 500 VPS/Dl 816
6.	After filling cup specimen should be placed in test set with stirrer motor plugged in and set turned on. Allow specimen to sit at least 3 minutes before testing with 1 minute intervals between tests (shots.)
7.	Take five shots of the specimen.
8.	To calculate the standard deviation of the five breakdown voltages subtract the lowest voltage reading from the highest voltage reading, multiply this result by 3 if this value is greater than the 2nd lowest voltage reading your sample exceeds the standard deviation. Go to the next step. Otherwise, take the average of the 5 shots. This is the dielectric breakdown voltage of the specimen.
9.	If the sample exceeds the standard deviation, take five more shots. The dielectric breakdown voltage is the average of all 10 shots.
NO	TE: If you get 2 excessively low shots in a row and you suspect a contaminated sample, retake the sample.
10.	If after repeated (two out of five) low readings, rinse the cup with kerosene, wipe dry with lint free rag and repeat test.

TRANSFORMER OIL SAMPLING

	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	PPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
Protection	DATE 1/25/99	<u> </u>	0	SHEET 7 of 8	APP - 6.017.03

11. SUGGESTED LIMITS FOR CONTINUED USE OF SERVICE-AGED INSULATING OIL (GROUPED BY VOLTAGE CLASS)

FOR 0.04 GAP <= 69 kV: 23KV 69 - 288KV: 26KV >345KV: 26KV

12. After testing is complete leave good oil in test cell for storage.

5.3. Close-out

- 5.3.1. Ensure all data forms are completed and attached.
- 5.3.2. Reviewed by Engineer.

TRANSFORMER OIL SAMPLING

Xcel Energy - North	DRAWN SIS	FILMED	REV	EM&P PHYSICAL A	APPARATUS PROCEDURES
ELECTRIC MAINTENANCE &	CHECKED	APPROVED			
PROTECTION	DATE 1/25/99		0	SHEET 8 of 8	APP - 6.017.03

Condition Assessments of Transformers

Criteria for Choosing Transformers

1. Type "U" Bushings w/ High PF:

This criteria refers to transformers with type "U" bushings in the high-, low-voltage or neutral. These bushings are due for test according to established Xcel Energy Type "U" Bushing test & replacement guidelines (condition-based PF readings).

2. <u>Age:</u>

A transformer covered by manufacturer warranty (i.e., new or repaired), or older than 25 years of age meets this selection criteria. In other words, if a transformer is out of warranty and not over 25 years old, it does not meet these selection criteria.

3. DGA:

If a transformer has a gassing profile it would meet this selection criteria.

4. Inadequate distribution backup/single-bank substation (N-1)

If a transformer's load cannot be fully picked up without setting a portable transformer it meets this criteria. In other words, if transformer failure results in a long-term outage, it meet this criteria.

5. Trouble/request:

If a transformer has a history of serious problems and or Operations makes a special request to have a CA performed it meets this criteria.

6. <u>Duty/through-faults:</u>

If a transformer sees heavy duty (e.g., arc furnace) or experiences a higher than system average number of close-in thru-faults it meets this criteria

Preventative Maintenance Plan

Xcel Energy Wheaton Generating Plant

February 8, 2001

Preventative Maintenance Plan Description:

Gas Turbine inspection and maintenance at Xcel Energy is based on OEM recommendations and operating experience coupled with sound engineering judgment. OEM guidance for frequency of inspection is based on starts and/or hours of operation dependent upon the frequency of operation of the gas turbines. For gas turbines that frequently start with low operating hours, maintenance and inspections are typically performed on a total number of starts basis. For gas turbines operating continuously for long periods of time with few starts, operating hours dictate the frequency of inspection and maintenance.

Xcel Energy's gas turbines are operated as peaking plants. That is, the units are only run during peak electricity demand conditions. These operating periods are typically in the 4 to 8 hour range. Consequently, Xcel Energy chooses to monitor the number of starts for a gas turbine as a means to determine proper maintenance and inspection intervals.

Operator Logs are maintained to document the number of starts for a gas turbine at each site. Xcel Energy personnel monitor the status of each gas turbine using the logs and determine the frequency of necessary maintenance for each gas turbine.

During operation of the gas turbines, operators periodically inspect the units, take readings and monitor for problems. These informal inspections provide for early detection of problems, mostly minor in severity, and allow for corrective action on an as needed basis.

Site Description:

Xcel Energy's Wheaton Generating Facility is a 6 unit facility with a winter Urge capacity of approximately 440 MW and a summer Urge capacity of approximately 345 MW.

The Wheaton facility has four General Electric Frame 7001 Model B gas turbines and two Westinghouse 501 AA gas turbines. The maintenance and inspection requirements for these two types of units differ by manufacturer and are based on each manufacturers recommendations for frequency and scope. Specific maintenance and inspection frequencies are listed in the Maintenance Frequency Table on page 4.

Inspection Plan:

I. Gas Turbine Inspection

A. Maintenance and Inspection Activities

NOTE: All inspections are performed in accordance with published Original Equipment Manufacturer (OEM) recommendations and inspection criteria.

- 1. Normal Operation During normal operation, operators inspect the gas turbines for evidence of developing problems. Any identified problems are addressed appropriately. Routine maintenance items (e.g. filter replacement, oil replacement, etc.) are completed when indications warrant (e.g. filter differential pressure, oil sample test results, etc.).
- Combustion Inspection This activity involves removal and repair or replacement of fuel nozzles, combustion liners, transition pieces and crossfire tubes. While these components are removed from the gas turbine, accessible portions of the turbine can be visually inspected for indications of excessive wear.
- 3. Hot Gas Path Inspection This inspection includes a complete combustion inspection (as described above) as well as the removal of the top half of the turbine case to allow for inspection of the turbine nozzle and turbine buckets.
- 4. Major Inspection Inspection of all major components of the gas turbine that are subject to wear during normal turbine operation. This inspection includes such items as: turbine casings, shrouds, buckets, seals, diaphragms, compressor and air inlet. In addition the activities of the combustion inspection and the hot gas path inspection are also performed.

B. Maintenance Frequencies

1. Frequency of maintenance is determined by the number of starts. Machines that operate for short durations experience the most wear during start-up sequences when temperature fluctuations are the most severe and the stress of thermal cycling is most significant. See the Table below for the Original Equipment Manufacturer (OEM) recommended frequency of maintenance and inspection activities.

Maintenance Frequency*							
Manufacturer – Unit	Fuel Nozzle Inspection	Combustion Inspection	Hot Gas Path	Major Overhaul			
General Electric Frame 7B	N/A	300 starts	600 starts	1200 starts			
Westinghouse 501AA	100 starts	300 starts	600 starts	1600 starts			

^{*} Starts are defined as only those that are successful starts or fired aborts; in other words only those starts that actually introduce heat into the combustion section shall be counted as starts for the purpose of determine maintenance frequency.

2. Any indications of significant operating problems will be evaluated using sound engineering judgment. Maintenance work deemed necessary will be performed on an as needed basis, even if the maintenance will occur sooner than the recommended frequencies shown above.

II. Gas Turbine Rating

A. Operating performance, generator availability and reliability will be tracked via the National Electric Reliability Council (NERC) and Generator Availability Data System (GADS) requirements. Xcel Energy utilizes the MicroGads software as a database for handling this data. Individual unit data is reviewed periodically to determine adverse trends and identify generating units performing below acceptable levels.

III. Corrective Action Schedule

- A. The table found in section I details the schedule for corrective action for a gas turbine. During the periodic inspections (i.e. combustion, hot gas, major) identified problems are corrected.
- B. Budgeting Annual budgets are developed based on operating histories. Each units current status compared to the inspection schedule identified in the Maintenance Frequency table is considered. Those units with impending inspections per the schedule are identified and funding is requested via the Xcel Energy budgeting process.

IV. Record Keeping

A. Maintenance records are maintained on-site of the inspection results for each gas turbine.

B. Generator availability data is tracked and entered on a monthly basis in the MicroGads system. This data is used to trend gas turbine performance and to budget for maintenance activities.

V. Filing of Plans

- A. This plan must be submitted to the PSC within 180 days of acceptance of the new rule PSC-113.0607.
- B. Any new facility must be included in this plan, or a new plan developed, and submitted within 180 days after the new facility begins operation in compliance with PSC-113.0607.

VI. Periodic Reporting Requirements

- A. A periodic report shall be provided to the PSC documenting compliance with the requirements set forth in PSC-113.0607. The periodicity of the report shall be established by the PSC but shall not exceed once every two years.
- B. The report should comply with the requirements of PSC 113.0607(2)(b)(6).

VII. Outage Information Exchange

A. PSC-113.0607 requires utilities to share planned outage information for the coming year. This exchange of information will be facilitated through the local reliability councils and/or through participation in a regional transmission organization (RTO) such as the MISO (Midwest Independent System Operator).

Preventative Maintenance Plan

French Island Generating Plant Units 3 & 4

Preventative Maintenance Plan Description:

Gas Turbine inspection and maintenance at Xcel Energy is based on OEM recommendations and operating experience coupled with sound engineering judgment. OEM guidance for frequency of inspection is based on starts and/or hours of operation dependent upon the frequency of operation of the gas turbines. For gas turbines that frequently start with low operating hours, maintenance and inspections are typically performed on a total number of starts basis. For gas turbines operating continuously for long periods of time with few starts, operating hours dictate the frequency of inspection and maintenance.

Xcel Energy's gas turbines are operated as peaking plants. That is, the units are only run during peak electricity demand conditions. These operating periods are typically in the 4 to 8 hour range. Consequently, Xcel Energy chooses to monitor the number of starts for a gas turbine as a means to determine proper maintenance and inspection intervals.

Operator Logs are maintained to document the number of starts for a gas turbine at each site. Xcel Energy personnel monitor the status of each gas turbine using the logs and determine the frequency of necessary maintenance for each gas turbine.

During operation of the gas turbines, operators periodically inspect the units, take readings and monitor for problems. These informal inspections provide for early detection of problems, mostly minor in severity, and allow for corrective action on an as needed basis.

Site Description:

Xcel Energy's French Island Generating Facility is a four unit facility consisting of two Refuse Derived Fuel (RDF) Units (#1 & #2) and two Gas Turbines (#3 & #4). The generating capacity of the two RDF units are less than 50 MW and are not required to be included in this maintenance plan. The two Gas Turbine units have a winter Urge capacity of approximately 192 MW and a summer Urge capacity of approximately 154 MW.

The French Island facility has two Westinghouse 501 BB gas turbines. The maintenance and inspection requirements for these units are based on manufacturers recommendations for frequency and scope. Specific maintenance and inspection frequencies are listed in the Maintenance Frequency Table on page 4.

Inspection Plan:

I. Gas Turbine Inspection

A. Maintenance and Inspection Activities

NOTE: All inspections are performed in accordance with published Original Equipment Manufacturer (OEM) recommendations and inspection criteria.

- 1. Normal Operation During normal operation, operators inspect the gas turbines for evidence of developing problems. Any identified problems are addressed appropriately. Routine maintenance items (e.g. filter replacement, oil replacement, etc.) are completed when indications warrant (e.g. filter differential pressure, oil sample test results, etc.).
- Combustion Inspection This activity involves removal and repair or replacement of fuel nozzles, combustion liners, transition pieces and crossfire tubes. While these components are removed from the gas turbine, accessible portions of the turbine can be visually inspected for indications of excessive wear.
- 3. Hot Gas Path Inspection This inspection includes a complete combustion inspection (as described above) as well as the removal of the top half of the turbine case to allow for inspection of the turbine nozzle and turbine buckets.
- 4. Major Inspection Inspection of all major components of the gas turbine that are subject to wear during normal turbine operation. This inspection includes such items as: turbine casings, shrouds, buckets, seals, diaphragms, compressor and air inlet. In addition the activities of the combustion inspection and the hot gas path inspection are also performed.

B. Maintenance Frequencies

A. Frequency of maintenance is determined by the number of starts. Machines that operate for short durations experience the most wear during start-up sequences when temperature fluctuations are the most severe and the stress of thermal cycling is most significant. See the Table below for the Original Equipment Manufacturer (OEM) recommended frequency of maintenance and inspection activities.

Maintenance Frequency*							
Manufacturer – Unit	Fuel Nozzle Inspection	Combustion Inspection	Hot Gas Path	Major, Overhaul			
Westinghouse 501BB	100 starts	300 starts	600 starts	1600 starts			

- * Starts are defined as only those that are successful starts or fired aborts; in other words only those starts that actually introduce heat into the combustion section shall be counted as starts for the purpose of determine maintenance frequency.
 - B. Any indications of significant operating problems will be evaluated using sound engineering judgment. Maintenance work deemed necessary will be performed on an as needed basis, even if the maintenance will occur sooner than the recommended frequencies shown above.

6

II. Gas Turbine Rating

A. Operating performance, generator availability and reliability will be tracked via the National Electric Reliability Council (NERC) and Generator Availability Data System (GADS) requirements. Xcel Energy utilizes the MicroGads software as a database for handling this data. Individual unit data is reviewed periodically to determine adverse trends and identify generating units performing below acceptable levels.

III. Corrective Action Schedule

- A. The table found in section I details the schedule for corrective action for a gas turbine. During the periodic inspections (i.e. combustion, hot gas, major) identified problems are corrected.
- B. Budgeting Annual budgets are developed based on operating histories. Each units current status compared to the inspection schedule identified in the Maintenance Frequency table is considered. Those units with impending inspections per the schedule are identified and funding is requested via the Xcel Energy budgeting process.

IV. Record Keeping

- A. Maintenance records are maintained on-site of the inspection results for each gas turbine.
- B. Generator availability data is tracked and entered on a monthly basis in the MicroGads system. This data is used to trend gas turbine performance and to budget for maintenance activities.

V. Filing of Plans

A. This plan must be submitted to the PSC within 180 days of acceptance of the new rule PSC-113.0607.

B. Any new facility must be included in this plan, or a new plan developed, and submitted within 180 days after the new facility begins operation in compliance with PSC-113.0607.

VI. Periodic Reporting Requirements

- A. A periodic report shall be provided to the PSC documenting compliance with the requirements set forth in PSC-113.0607. The periodicity of the report shall be established by the PSC but shall not exceed once every two years.
- B. The report should comply with the requirements of PSC 113.0607(2)(b)(6).

VII. Outage Information Exchange

A. PSC-113.0607 requires utilities to share planned outage information for the coming year. This exchange of information will be facilitated through the local reliability councils and/or through participation in a regional transmission organization (RTO) such as the MISO (Midwest Independent System Operator).